


TROUBLESHOOTING - ERROR SIGNALS

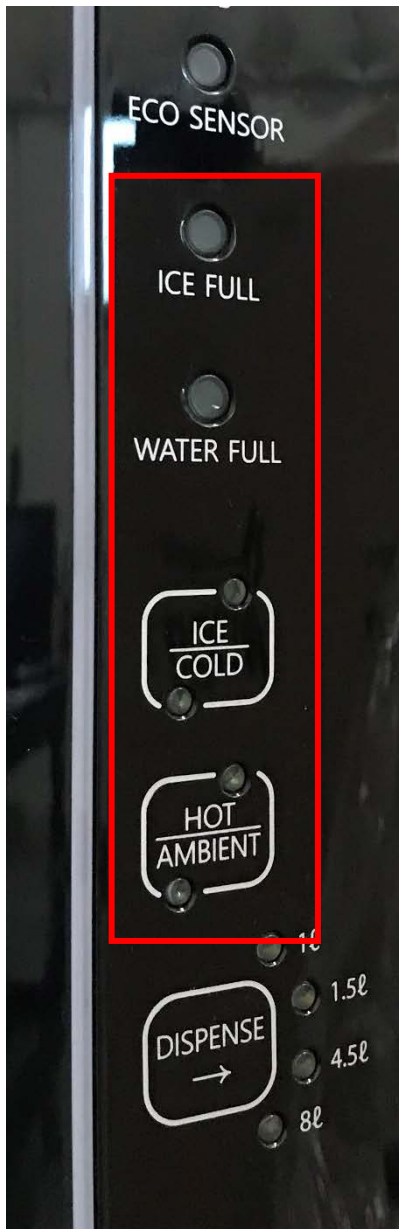

LED	SIGNAL	FAILURE and WHAT TO INSPECT
ICE FULL LED	BLINKING LIGHT	ICE OPERATION FAILURE - Ice full sensor failure. Check sensor and Ice Level.
WATER FULL LED	BLINKING LIGHT and AUDIBLE ALARM	WATER OVERFLOW - Water has overfilled the Ambient Tank. Possible sensor failure, or feed water pressure too high (+90psi).
ICE LED	BLINKING LIGHT	ICE OPERATION FAILURE - Ice bucket, coupler, rotational motor; Refrigerant temp sensor; Compressor - Loss of Refrigerant.
COLD LED	BLINKING LIGHT	COLD OPERATION FAILURE - Cold water temp sensor; Cold water circulation pump; Compressor.
HOT LED	BLINKING LIGHT	HOT OPERATION FAILURE - Hot tank temp sensor; Hot tank bi-metal high limit thermostat.
AMBIENT LED	BLINKING LIGHT	AMBIENT OPERATION FAILURE - Ambient water level sensor; booster pump; filters, leak stop valve, 3-way diverter solenoid, Raw Water Solenoid.