

i30

MANUAL



Culligan Quench
630 Allendale Road, Ste 200
King of Prussia, PA 19406
(855) 558-9796 www.Wellsyswater.com

i30 MANUAL

Congratulations on your choice of the **Wellsys i30 Ice & Water Dispenser**. The **i30** model dispenses highly filtered ice and water. The **Wellsys i30 Water Dispenser** provides exceptional quality and great tasting ice and water with every use.

INTRODUCTION

Carefully read and follow all instructions to ensure proper and efficient operation of your **Wellsys i30 Ice & Water Dispenser**. Contact your **Authorized Wellsys Dealer** if you have any questions.

Wellsys and **Authorized Wellsys Dealers** employ trained service personnel who are experienced in the installation, function, and repair of this equipment. This publication is written for use by these qualified individuals. **Wellsys** encourages users to learn about products, however, we believe that product knowledge and service is best obtained by consulting your **Authorized Wellsys Dealer**.

Wellsys Ice & Water Dispensers should be combined with selected water treatment components to create a system specifically tailored for each application by trained and qualified personnel.

Products manufactured and marketed by **Wellsys** and its affiliates are protected by patents issued or pending in the United States and other countries.

Wellsys reserves the right to change the specifications referred to in this literature at any time, without prior notice. Changes or modifications not expressly approved by **Wellsys** could void the warranty and user's authority to operate the equipment.

TABLE OF CONTENTS

USER GUIDE

• Safety Alert Symbols	4
• Safety Precautions	4
• Features and Benefits	6
• Certifications	7
• Model Designations, Consumables, & General Specs	8
• Size Specifications	9
• Receiving Your Equipment	10
• User Interface & Operating Instructions	11
• Refrigerant Notice	12
• Warranty	13

SERVICE GUIDE

• Service Requirements	14
• i30 Parts Diagram (R404a Version)	15
• i30 Parts Diagram (R290 Version)	19
• Flow Diagram	23
• Electrical Diagram (R404a Version)	24
• Electrical Diagram (R290 Version)	25

INSTALLATION GUIDE

• Pre-Installation Procedures	26
• Notes on Installation	27
• Filter Flushing Procedure	28
• Installation	29
• PM Guide	39
• Service Alarm (R290 Version)	44
• Service Alarm (R404a Version)	45
• Final Inspection	46

MAINTENANCE

• Preventative Maintenance	47
• System Inspection	48
• Warranty Procedure	48

TROUBLESHOOTING

• Function Codes	49
• Error Codes	50
• Troubleshooting Guide	51

SAFETY ALERT SYMBOLS

Read and follow all safety information carefully. The signal words used in this manual are selected as shown below and based on an assessment of the degree of potential injury or damage (severe or minor) and the occurrence of injury (occurs or has the potential to occur) when the warning is ignored:

⚠ DANGER!

Indicates a situation which, when not avoided, results in death or severe injury.

⚠ WARNING!

Indicates a situation which, when not avoided, has the potential to result in death or severe injury, and/or severe property damage.

⚠ CAUTION!

Indicates a situation which, when not avoided, results in or has the potential to result in minor injury; and/or minor property damage.

SAFETY PRECAUTIONS

Basic safety precautions should be followed, including the following:

Ensure all Local, State, and Federal Laws and Codes including health and safety guidelines are met when installing **Wellsys** Equipment. Only qualified service technicians should attempt installation and service of **Wellsys** Equipment. Always read the entire operating instructions before using the appliance and save these instructions for future use.

⚠ DANGER! ***This product can cause death or severe injury if incorrectly operated, installed or maintained.** The installation, maintenance, sanitizing and any repair must be performed by qualified persons trained by Wellsys or their approved distributors only. Do not remove any panel or cover to protect against electrical shock and exposure to UV radiation.*

⚠ DANGER! ELECTRICAL SHOCK HAZARD. *Always use a dedicated and properly grounded outlet. Unit should be protected by ground-fault circuit interrupter (GFCI) or residual current device (RCD) having a rated residual operating current not exceeding 30mA. Use only **Wellsys** supplied power cord. Never use extension cords or power strips to connect unit. Do not use if the power supply cord is damaged. Always unplug from power supply prior to servicing.*

⚠ WARNING! AUTHORIZED USE ONLY. *This appliance is to be used for its intended purpose as described in this manual. Untrained individuals who use this manual assume the risk of any resulting property damage or personal injury. This appliance can't be used by children and persons with reduced physical, sensory, or mental capabilities or lack of experience.*

⚠ WARNING! DO NOT OPERATE IF DAMAGED. *Unplug and isolate water supply if abnormal conditions exist. Contact Wellsys or authorized dealer for repair, service, and installation to avoid hazards.*

⚠ WARNING! CONNECT TO POTABLE WATER SUPPLY. *This system is to be used for water only and is NOT intended for use where water is microbiologically unsafe or with water of unknown quality without adequate disinfection before or after the system.*

⚠ WARNING! TIP HAZARD. *Equipment could tip or fall causing serious injury if installed with a base. Always install unit on a firm, flat, and level surface and secure unit to cabinet, wall, or floor if needed and secure to the base, if applicable. Never place heavy items on top of unit and never climb, stand, or hang on unit or storage cabinet to prevent injury and damage.*

-  **WARNING!** **UNIT IS HEAVY. TWO PERSON LIFT REQUIRED.** *Transport unit empty and always use material handling equipment or two people with proper lifting technique to reduce injury risk.*
-  **WARNING!** **STORE AND TRANSPORT UNIT EMPTY. ALWAYS SANITIZE BEFORE USE.** *The unit must be completely drained before storing to avoid stagnation and reduce microbiological contamination (potential bacterial growth). Always sanitize before use to eliminate any potential microbiological contaminants.*
-  **CAUTION!** **INDOOR USE ONLY.** *Never expose to direct sunlight, heat sources, or ambient air temperature above 37°C (100°F) or below 2°C (35°F). Install indoors and keep unit away from excessive humidity or rain. Never expose to freezing temperatures. Ensure there is adequate clearance around the unit to allow refrigeration system condenser to dissipate heat. Warmer environments require more clearance around the unit. Minimum clearance from the top and back of the machine is 8-inches. Installs where the ambient temperature exceeds 27°C (80°F), require a minimum of 14-inches of vertical clearance for proper heat dissipation and efficient operation.*
-  **CAUTION!** **USE A WATER PRESSURE REGULATOR.** *Wellsys will not be responsible for injury or damage caused by excessive water pressure. Input or feed pressure must be 30 psi to 60 psi. Be aware of any potential pressure surges caused by building/municipal pumping stations. Failure to comply will void all warranties. The manufacturer accepts no liability for damage caused by excessive water pressure.*
-  **CAUTION!** **USE UV STABILIZED SUPPLY LINES.** *Feed the unit with a potable ambient or cold-water supply only. Feed water over 37°C (100°F) can damage the treatment components. Water block devices and external leak detectors are strongly recommended. Locate the unit as close to the water supply and the electrical connections as possible. Immediately isolate or close water supply valve and contact service representative if leak is noticed.*
-  **WARNING!** **REFRIGERANT SYSTEM.** *This system is manufactured with R290 refrigerant. Repairs to the refrigeration system must be performed by a certified refrigeration technician only. R290 refrigerant is flammable.*
-  **CAUTION!** **DO NOT PLACE HEAVY ITEM OR WATER CONTAINER ON TOP OF UNIT.** *Water may leak into the electrical system causing a fire hazard. Heavy items may fall off causing injury.*

Contact Wellsys for assistance or help finding an Authorized Service Representative.

i30 FEATURES AND BENEFITS

Ice and Water

The ***i30 Ice & Water Dispenser*** produces a large quantity of ice and freshly filtered water to meet customer demands.

Ice Capacity and Production

The ***i30 Ice & Water Dispenser*** can produce 435lbs of ice per day and can store up to 30lbs of Ice.

Combination Dispense

The ***i30 Ice & Water Dispenser*** can dispense ice and water separately, or at the same time.

Auto Flush for Scale Prevention

The ***i30 Ice & Water Dispenser*** will automatically flush the ice-making mechanism after a period to mitigate scale build-up.

Touch Sensor Dispense

Touch Sensors are used to activate dispense functions. Simply touch the sensor for the desired dispense.

Carbon Filtration with Scale Inhibition

The ***i30 Ice & Water Dispenser*** uses a fiber-core filter to remove sediment and chlorine, improving taste, and contains phosphate to reduce scale build-up.

Countertop Installation or Optional Base Cabinet

The ***i30 Ice & Water Dispenser*** can be installed on an unobstructed countertop (given proper clearance), or an Optional Base Cabinet can be purchased to mount the unit as free-standing.

Nugget Ice

The ***i30 Ice & Water Dispenser*** uses a proprietary mechanism to form and cut the ice into “nugget” pieces.

R290 Refrigerant

The ***i30 Ice & Water Dispenser*** uses R290 refrigerant with a GWP value of 3, well below the EPA limit of 150.

CERTIFICATIONS

The ***Wellsys i30 Ice and Water Dispensers*** has been tested and certified to rigorous NSF and UL Standards. We believe that performance testing and certifications validate ***Wellsys*** as a world-leader in Water Dispensers.

Wellsys i30 Component Certifications Include:



NSF/ANSI 372, UL-563

The ***Wellsys i30*** is certified by UL against NSF/ANSI 372 for low-lead content in plumbing products and components used in potable water systems, and to UL-563 for Electrical Safety in Ice Makers.



NSF/ANSI 12 – Ice Making Equipment

Intertek Labs (ETL) Certified the ***Wellsys i30*** to NSF/ANSI 12, the Standard for Ice Making Equipment for minimum food protection and sanitation requirements in materials, design, construction and performance.

MODEL/PART DESIGNATIONS

BRAND NAME	DESCRIPTION	MODEL - PART NUMBER
<i>i30</i>	<i>i30</i> – Ice and Water Dispenser	i30
	Serial#: XC/IO200102P401/XXXX (Post-2026 model, R290)	
	Serial#: XC/IO200102P400/XXXX (Pre-2026 model, R404a)	

CONSUMABLES


FILTER	REPLACEMENT FREQUENCY	PART NUMBER
FIBER-CORE FILTER W/ PHOSPHATE	6 MONTHS, 10,000gal	ICE10K

SPECIFICATIONS

<u>ITEM</u>	<u>i30</u>
Water Connection	3/8" Quick Connect
Recommended Service Water Pressure	30-60psi (4.2-4.9kgf/cm ²)
Rate Voltage	AC 115V/60Hz @ 8.0Amps
Power Consumption	1.60kWh/24hrs
Power Cord	1.9m (6.3ft)
IP Class	IPX1
Climate Class	N Class (32°C +/- 1°C) (89.6°F +/- 33.8°F)
Safety Device	Overheating protector. Fuse.
Ice Storage Capacity	30lbs
Ice Production	380lbs/day @ 70°F air + 50°F water 289lbs/day @ 90°F air + 70°F water
Environmental Temperature	Max: 90°F (32°C) Min: 35°F (2°C)
Source Water Temperature	Max: 90°F (32.2°C) Min: 50°F(10°C)
Relative Humidity	55% at 78°F(25.5°C)
R404a Version	
Refrigerant Gas	R404a (400g) mfg on or before March 2024 R404a (360g) mfg on or after April, 2025
R404a Pressures	375psi (25.8bar) High Side, 193 (13.3bar) Low Side
R290 Version	
Refrigerant Gas	R290 (3.49oz/99g)
R290 Pressures	300psig (20.7bar) High Side, 165psi (11.4bar) Low Side

SIZE SPECIFICATIONS

<u>Dimension</u>	<u>i30 Ice/Water Unit</u>	<u>i30 Base Cabinet</u>
Width/Depth/Height	16.6"W x 26.7"D x 46.1"H	16.6"W x 26.7"D x 28.3"H
Weight (dry)	223lbs	58lbs
Depth between legs (OD)	18.75"	N/A
Dispense Height	10.5"	N/A

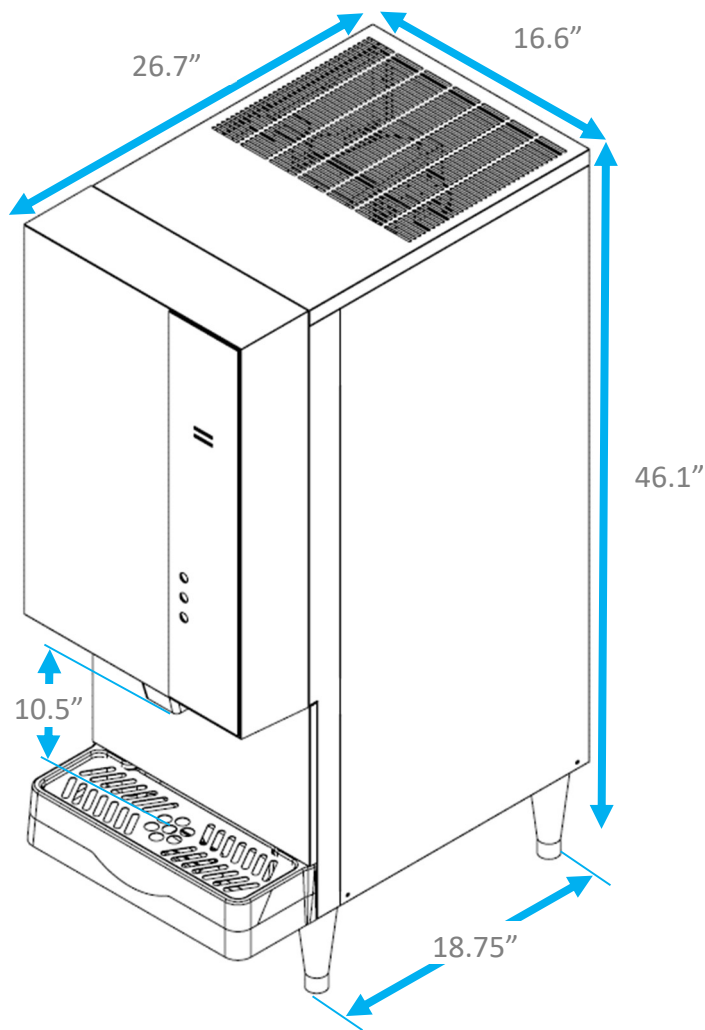

RECEIVING YOUR EQUIPMENT


Upon receipt of your equipment, you should check the following:

1. Are the systems still on the pallet?
2. Confirm the number of boxes you are signing for.
3. Is there any obvious damage to the product or the boxes?

If there are any discrepancies or any obvious damage to the equipment or boxes, please note it on the "Bill of Lading" and/or refuse the shipment.

After receiving the equipment from the carrier, remove packaging and inspect for any hidden freight damage. If freight damage has occurred, call the freight company and customer service (800) 288-1891 to report the damage. Photograph all damages to be submitted with the claim. THIS MUST BE DONE WITHIN FIVE BUSINESS DAYS OF DELIVERY. If not reported within 3 business days, Wellsys and/or carrier will not be responsible for replacement or repair.

USER INTERFACE & OPERATING INSTRUCTIONS

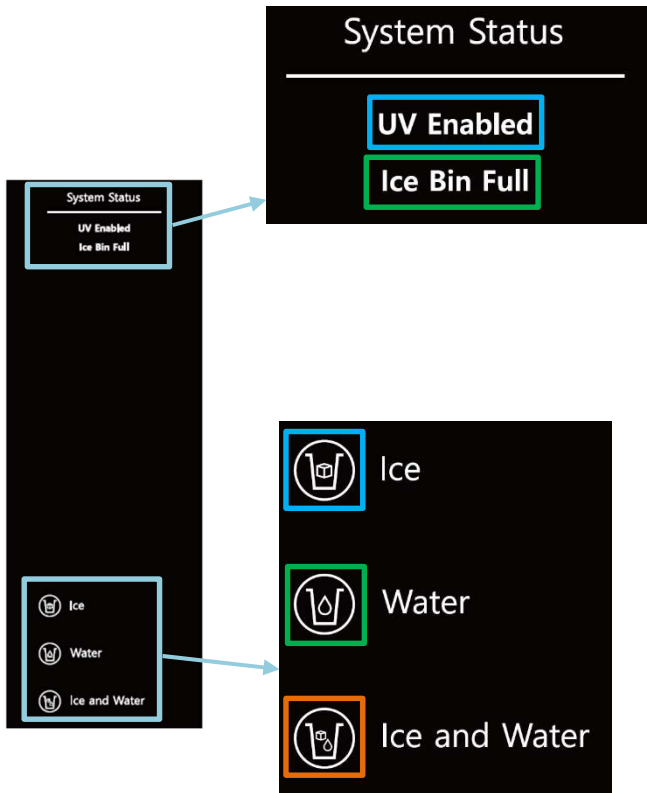

- **UV Enabled:** This light indicates the units UV lights are active and working properly.
- **Ice Bin Full:** This light indicates that the Ice Bin is full.

- **Ice Sensor:** Touch and hold the Ice Sensor to dispense Ice only. Release to cease dispensing.
- **Water Sensor:** Touch and hold the Water Sensor to dispense Water only. Release to cease dispensing.
- **Ice and Water Sensor:** This LED indicator will show the current selection of water temperature; Hot or Cold.

ERROR SIGNAL: If the unit experiences an error, the Ice, Water, and Ice and Water sensor will blink simultaneously. If this occurs, open the front panel of the machine to view the error code and proceed to the Error Display section of this manual.

REFRIGERANT NOTICE

As of December 2025, all Wellsys i30 units have been outfitted with new refrigerant systems and new refrigerant, R290.

This change was made to comply with the EPA's American Innovation and Manufacturing (AIM) Act of 2020, which phases down refrigerants with high-GWP (Global Warming Potential) scores, with the new regulation setting the limit at 150, and enforcement beginning January 1st, 2026. Refrigerant R404a, which was used previously, had a GWP near 4,000. The new R290 refrigerant has a GWP of 3, and is the approved low-GWP replacement that meets compliance and environmental standards set forth by the EPA.

While R290 is better for our environment, and while the gas system in the Wellsys i30 uses a very small amount of this gas, it is flammable, and special precautions must be taken when attempting to service the refrigerant system.

Because R290 is flammable, the new units have been outfitted with high-visibility warning labels on the back to inform any service technician of the presence and use of this refrigerant. Examples of these labels can be seen below.



WELLSYS MANUFACTURED WATER DISPENSER LIMITED WARRANTY

The Wellsys i30 is covered by the Wellsys Warranty for a period of 2 years from the date of purchase on the compressor and parts, given the filtration is changed with Wellsys branded filters on the recommended schedule.

General Provision and Exclusions:

This warranty only applies in the fifty (50) United States and Canada. This warranty does not apply, and no agreement, whether written or implied, shall be applicable if the affixed serial number is removed, defaced, or obliterated. This warranty does not apply to the filters after exposure to water. Refer to service manual for filter requirements and expected performance. This warranty does not apply if parts used as original or replacement equipment, including filters, are not obtained, or authorized through WELLSYS, and such unauthorized usage shall void this warranty. This warranty does not apply to any wetted parts that become inoperative due to lime, scale, or other water quality conditions. This warranty does not apply to any machine or components that have become inoperable due to a failure by Dealer/Distributor or the end-user to satisfy standards or regulations adopted by any governmental agency. This warranty does not cover performance, failure or damages of any part resulting from external causes such as alterations, abuse, misuse, misapplication, neglect, accident, installation, operation contrary to printed material, corrosion or acts of God.

This warranty only applies to the operative components of the machine and does not apply to the exterior shell or frame to which the shell is attached and the appearance of the machine.

This warranty and any applicable industry certifications for this machine are automatically voided if the machine is altered, modified, or combined with any other machine, equipment, or device. Alteration or modification of the machine may cause serious flooding and/or hazardous electrical shock or fire. Except as set forth herein, WELLSYS makes no other warranty, guarantee or agreement expressed, implied or statutory, including any implied of merchantability or fitness for a particular purpose.

The foregoing is in lieu of all other agreements expired or statutory and all other obligations or liabilities of WELLSYS. WELLSYS does not assume or authorize any person to assume any obligations of liability in connection with this product. In no event will WELLSYS be liable for special, incidental, consequential, or punitive damages, or for any delay in the performance of this warranty agreement due to causes beyond its control.

Export Warranty:

The WELLSYS export warranty shall apply to all area outside of the Continental limits of the United States and Canada. The export warranty shall mirror the domestic warranty set forth above in all respects except that a) the export warranty shall be limited to the Initial Term and there is no coverage for the additional warranty through the first year and b) the Dealer/Distributor shall be responsible for all transportation charges to implement the repairs.

ALL WARRANTY REPAIRS SUBJECT TO PRIOR APPROVAL BY THE WELLSYS SERVICE DEPARTMENT IN ORDER TO VALIDATE THAT THE DEFECTIVE COMPONENT IS STILL UNDER WARRANTY.

SERVICE REQUIREMENTS

⚠ WARNING! *Read and understand the contents of this manual before attempting to service the i30 Ice and Water Dispenser. Failure to follow the instructions in this manual could result in death, serious personal injury, or severe property damage. Only trained and qualified technicians should attempt to install, maintain, or service Wellsys Equipment.*

1. Visually inspect all electrical and water connections for signs of wear or damage.

⚠ DANGER! **HIGH VOLTAGE ELECTRICAL HAZARD.** *Unplug before inspection and service.*

⚠ WARNING! **ULTRAVIOLET RADIATION.** *Protect your skin and eyes against ultraviolet rays. Never look directly at an operating UV light. Disconnect before removing UV Lamp.*

⚠ CAUTION! **UV LIGHTS ARE HAZARDOUS.** *Lamps are considered Hazardous Waste and must be disposed of accordingly. Refer to Product MSDS sheet for details.*


⚠ CAUTION! **R290 REFRIGERANT IS FLAMMABLE.** *Unit contains R290 Refrigerant, which is flammable. Service of the refrigerant system should only be performed by trained professionals in a well-ventilated area, void of any open flames or ignition sources.*

2. Ensure there is a minimum of 8" clearance behind and 14" clearance above the **i30 Ice and Water Dispenser** and clean the condenser grill to provide efficient cooling system operation.
3. Sanitize the unit per instructions in the sanitization procedures.

⚠ WARNING! **SANITIZER MAY CONTAIN HAZARDOUS CHEMICALS.** *Use of proper personal protective equipment such as rubber gloves and eye protection are required.*


4. Clean and sanitize external surfaces of the **i30 Ice and Water Dispenser**. Use soap and water or chemicals that are compatible with ABS plastic and will not damage or degrade the product surfaces.
5. Remove and clean the Faucet. Replace as needed.
6. Flush in filters per instructions, and change filters on predetermined schedule, commonly every 12 months for standard filters.

i30 PARTS DIAGRAM (R404a Version)

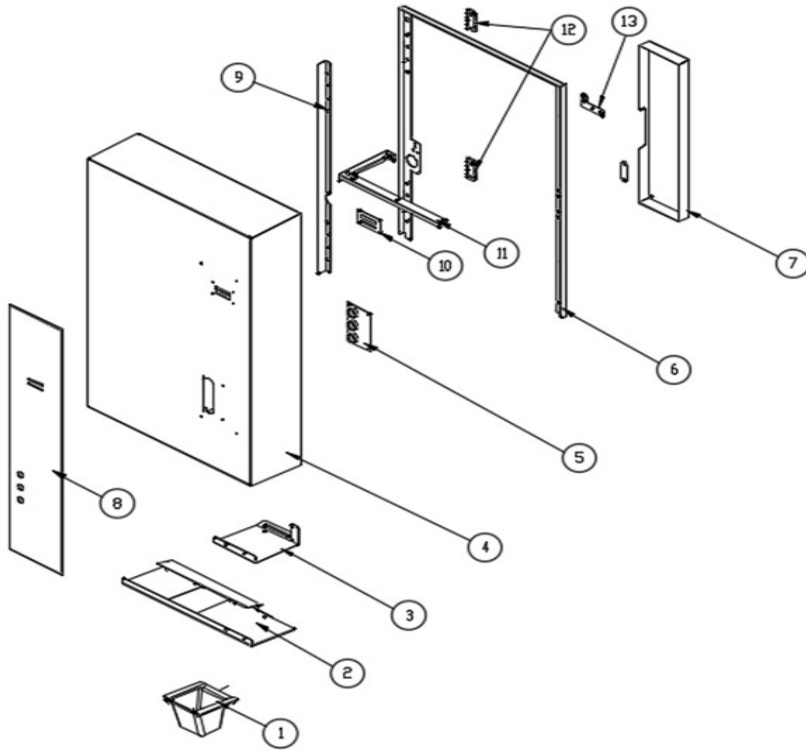


Recommended Stock Parts


NO	DESCRIPTION	PART #
1	COVER SPOUT	318043201
2	FRONT DOOR BASE D WELD ASSY	301233900
3	LOCKING BASE PLATE	301233301
4	FRONT DOOR	301232801
5	BUTTON PCB	367016800
6	FRONT PANEL BASE	301232600
7	BUTTON PCB COVER	301233101
8	BUTTON DISPLAY	440035001
9	HINGE BKT	301232700
10	LED PCB	367016901
11	HARNESS BKT	301233201
12	YSH HINGE	321007500
13	DOOR REINFORCE PLATE	301235500

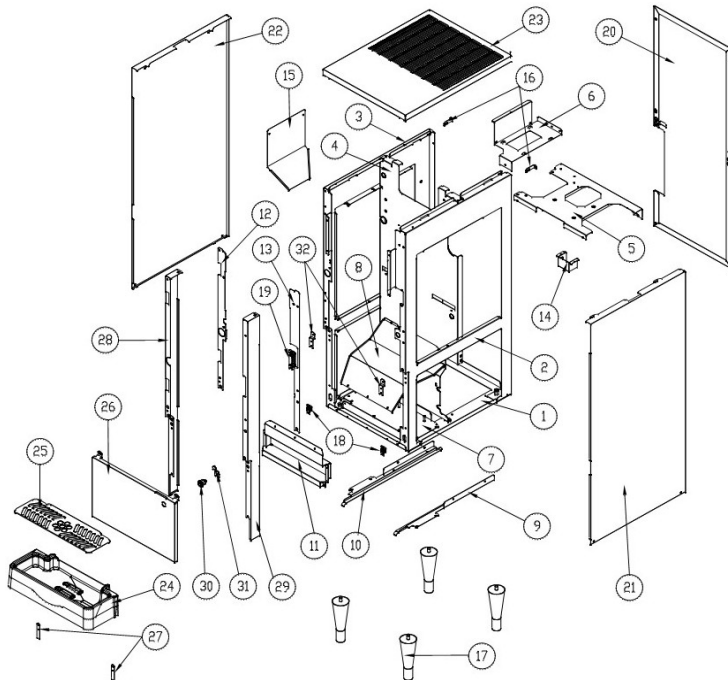


NO	DESCRIPTION	PART #
1	BASE PLATE	332047210
2	RIGHT SIDE ANGLE	332051600
3	LEFT SIDE ANGLE	332051700
4	MIDDLE SIDE ANGLE	332046910
5	BKT AUGER MOTOR ASSY	402058100
6	BKT WATER TANK	301202800
7	BKT COMP ASSY	301204120
8	PLATE DRAIN GUIDE	317233800
9	GUIDE AIR FILTER L	332047410
10	GUIDE AIR FILTER R	332047310
11	BKT TOP DRAIN	301234200
12	SPACER PLATE_L	301232300
13	SPACER PLATE_R	301232200
14	KIOSK PCB BKT	301234500
15	DRAIN GUIDE PLATE	301203500
17	FOOT EXPORT	302006820
18	DOOR LOCK	631000700
19	BKT LOCKING MAGNET	301183150
20	BACK PANEL	301235300
21	PANEL SIDE R	301234000
22	PANEL SIDE L	301234100
23	TOP COVER	317217950
24	DRAIN BOX	336029601
25	DRAIN BOX GRILL	301236100
26	FRONT PANEL DOWN	301233400
27	BKT LOCKING HOOK	301181400
28	FRONT SIDE PANEL_L	301232400
29	FRONT SIDE PANEL_R	301232500
30	LOCKING DEVICE	219003800
31	LOCK PLATE	301178201
32	FRONT PANEL DOWN BKT	301234300

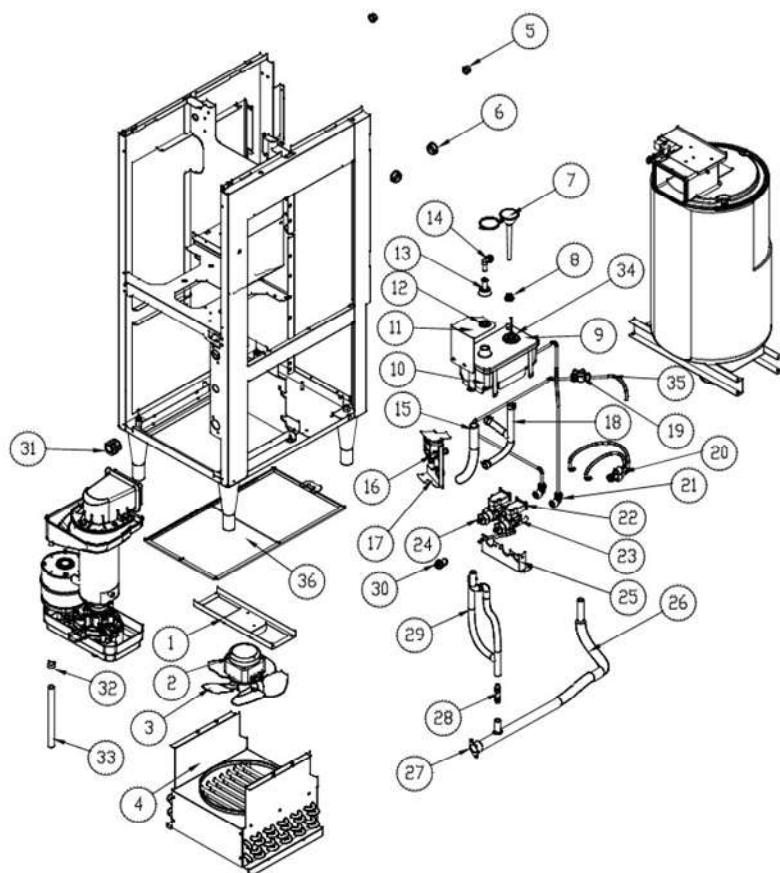

NO	DESCRIPTION	PART #
1	BKT FAN MOTOR	301205600
2	FAN MOTOR/EURO/82UL-4027	353035800
3	FAN	308004700
4	CONDENSER ASSY (115V/60Hz)	411035310
5	GROMMET BUSHING	232003600
6	GROMMET BUSHING	232003500
7	FUNNEL	318039300
8	FUNNEL PACKING	303037200
9	WATER RESERVOIR COVER	654000301
10	WATER RESERVOIR	654000200
11	BKT WATER TANK COVER	301218300
12	BUSHING(PIPE)	232004900
13	RESERVOIR INLET	319007801
14	STEM ELBOW	398015000
15	SILICON HOSE	229029500
16	DRAIN VALVE	340029500
17	BKT DRAIN	301202000
18	MULTIPLE WATER HOSE	229033602
19	SPEEDFIT TO SPEEDFIT CONNECTOR	398012410
20	TWO WAY DIVIDER	398019400
21	REDUCING ELBOW	398013700
22	WATER VALVE CAP	319007900
23	WATER VALVE	340029401
24	TAP ADAPTOR	398011600
25	DRAIN V/V BKT	301236700
26	HOSE DRAIN A	229035200
27	SOCKET PT3/4"	215019000
28	NIPPLE	398011401
29	HOSE DRAIN B	229035300
30	BULKHEAD CONNECTOR	398019300
31	CABLE GLAND	227001200
32	BAND SPRING 16	203003200
33	SILICON HOSE	229029400
34	ASSY WATER LEVEL SENSOR	722014501
35	PE TUBE (O.D 1/4")-BLACK	229013610
36	AIR FILTER	640009002

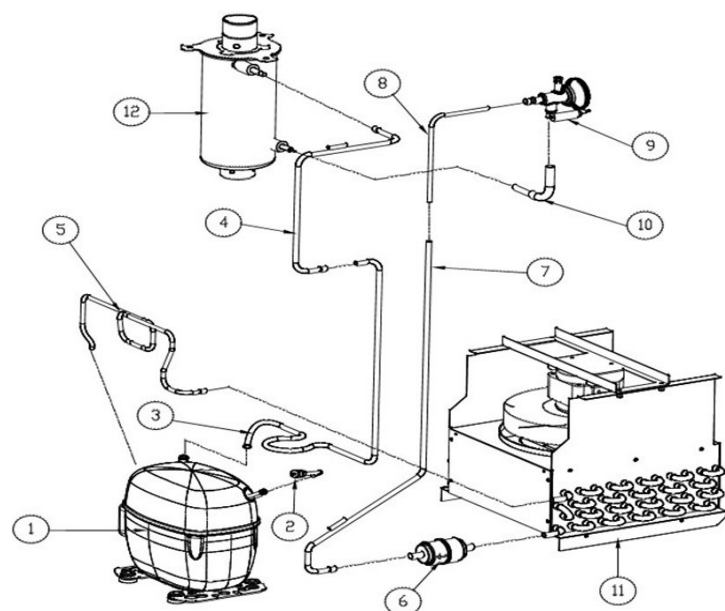


NO	DESCRIPTION	PART #
1	COMP/SC12MLX_OLP	401023000
2	CHARGE NIPPLE ASSY	104002600
4	EVA OUTLET PIPE	325159500
5	DISCHARGE PIPE ASSY (115V/60Hz)	325158610
6	FILTER DRYER	372001300
8	EXPANSION INLET PIPE	325159300
9	EXPANSION VALVE	340004500
10	EXPANSION OUTLET PIPE	325159200
11	CONDENSOR ASSY	411035310
12	EVAPORATOR FORM ASSY	409043812

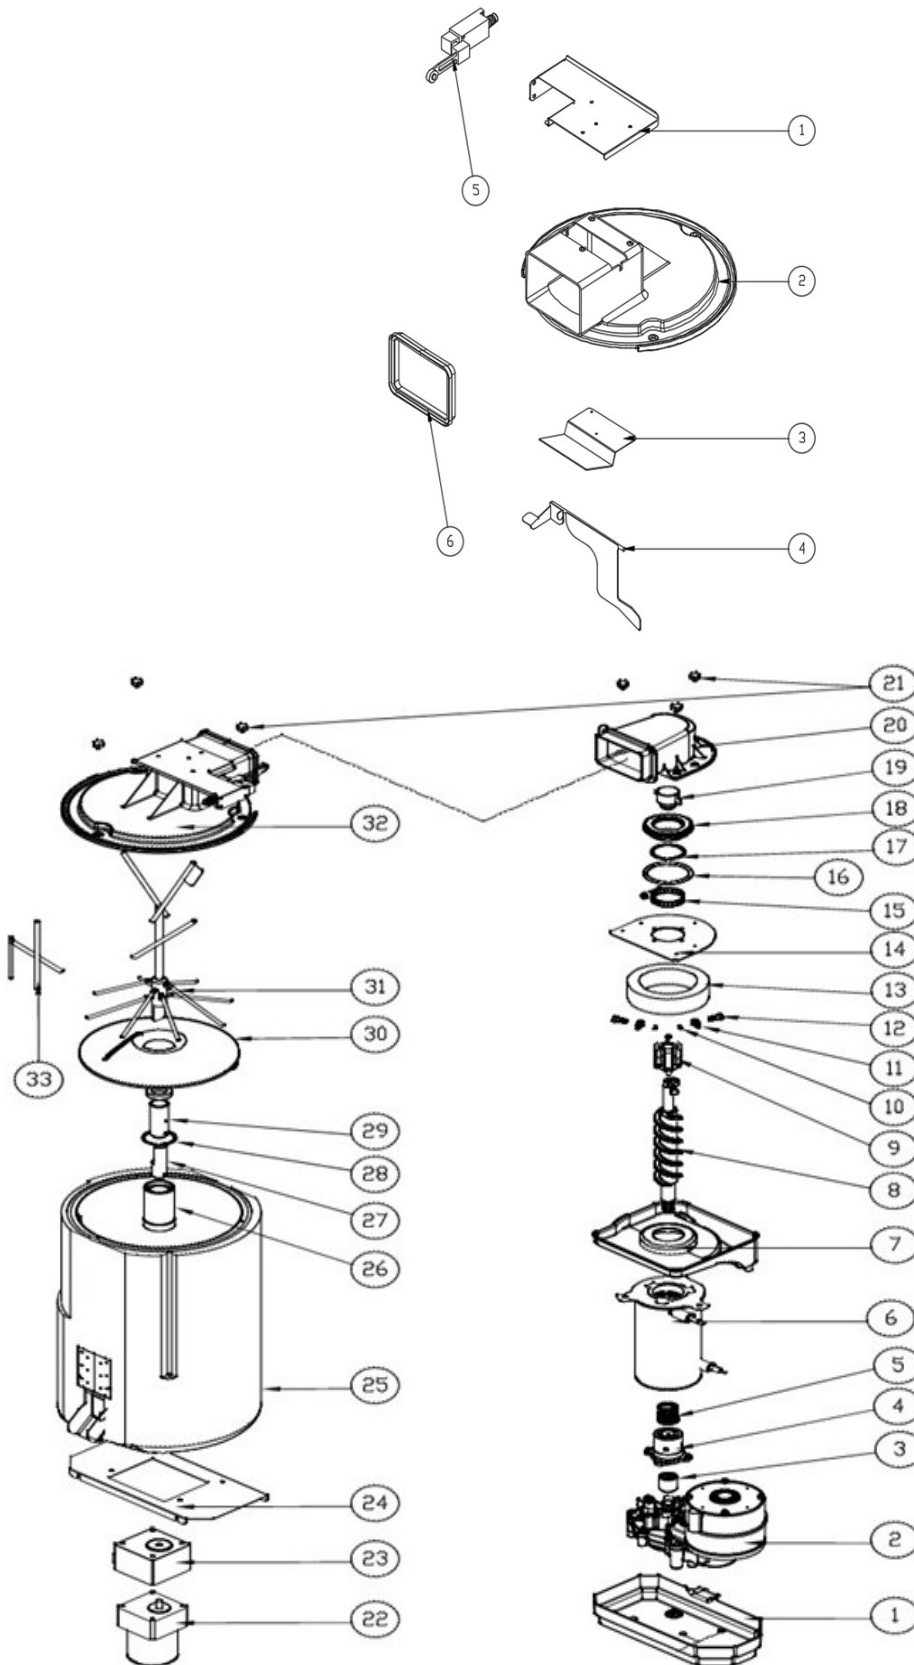


NO	DESCRIPTION	PART #
1	ICE CHUTE COVER	317219001
2	HOPPER COVER	318041401
3	ICE GUIDE PLAT	301226400
4	ACTUATOR SHAFT ASSY	314045001
5	ASSY FULL LIMIT SWITCH	722018610
6	COVER SHUT	303042000

NO	DESCRIPTION	PART #
1	GEAR MOTOR DRAIN PAN	318039150
2	AUGER MOTOR ASSY	406026410
3	SPLINE COUPLING	612000800
4	HOUSING ASSY	491000900
5	MECHANICAL SEAL	303036900
6	EVAPORATOR FORM ASSY	409043812
7	DRIP PAN	604003200
8	AUGER	430005000
9	EXTRUDING HEAD ASSY	491000801
10	O-RING	303032000
11	HEAD LOCKING WASHER	211008000
12	HEX WRENCH BOLT SEMS	210820700
14	FLANGE SPOUT	301199500
15	BAND SPRING 16	203004100
16	PACKING	303041800
17	O-RING	303037500
18	HOLD SPOUT	395007800
19	IMPELLER ICE ASSY	390001510
20	SPOUT	450000600
21	HAND SCREW	210804502
22	AGITATOR MOTOR ASSY	406027613
23	MOTOR COVER PACKING	303039801
24	HOPPER SUPPORT BASE	301202501
25	HOPPER FORM ASSY	442009701
26	BEARING POM	310007300
28	O-RING	303037500
29	MAIN SHAFT TWO	314044700
30	ICE BASE PLATE	610035400
31	AGITATOR ASSY	436003800
32	HOPPER COVER ASSY	420054120
33	MIXING BAR ASSY	436004200

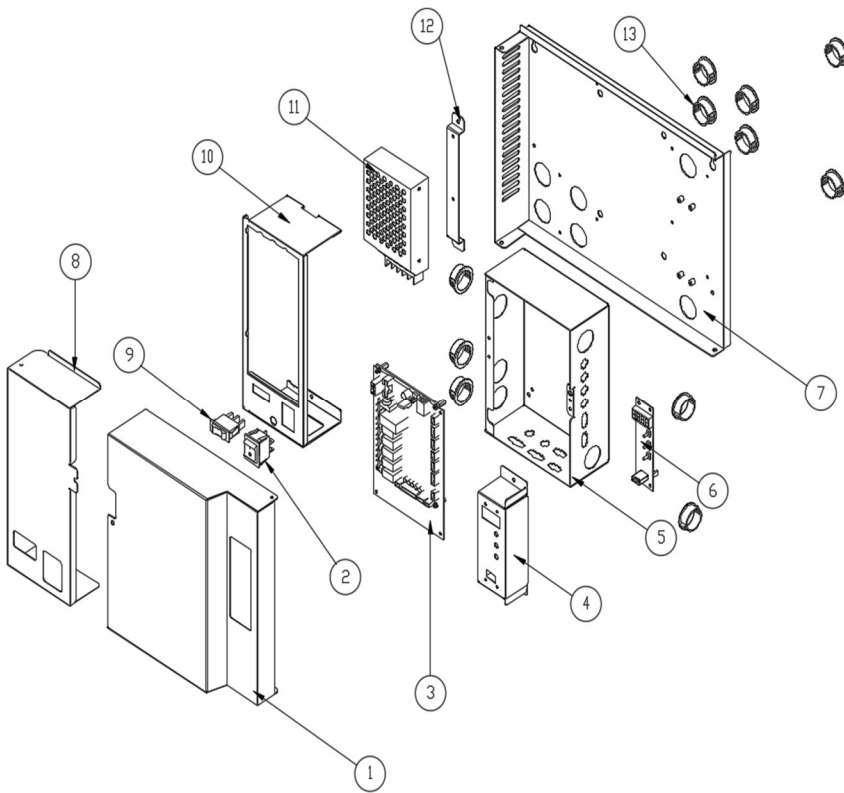


NO	DESCRIPTION	PART #
1	CONTROL BOX COVER	301234700
2	POWER SWITCH	355009800
3	MAIN PCB	415013401
4	FND USB PCB BKT	301235000
5	CONTROL BOX	374152800
6	FND USB PCB	367016700
7	CONTROL BOX BASE	301235100
8	SMPS COVER	301234600
9	IOW SWITCH	355012400
10	SWITCH BKT	301234800
11	SMPS	629001200
12	SMPS BKT	301234900
13	GROMMET BUSHING	232003500

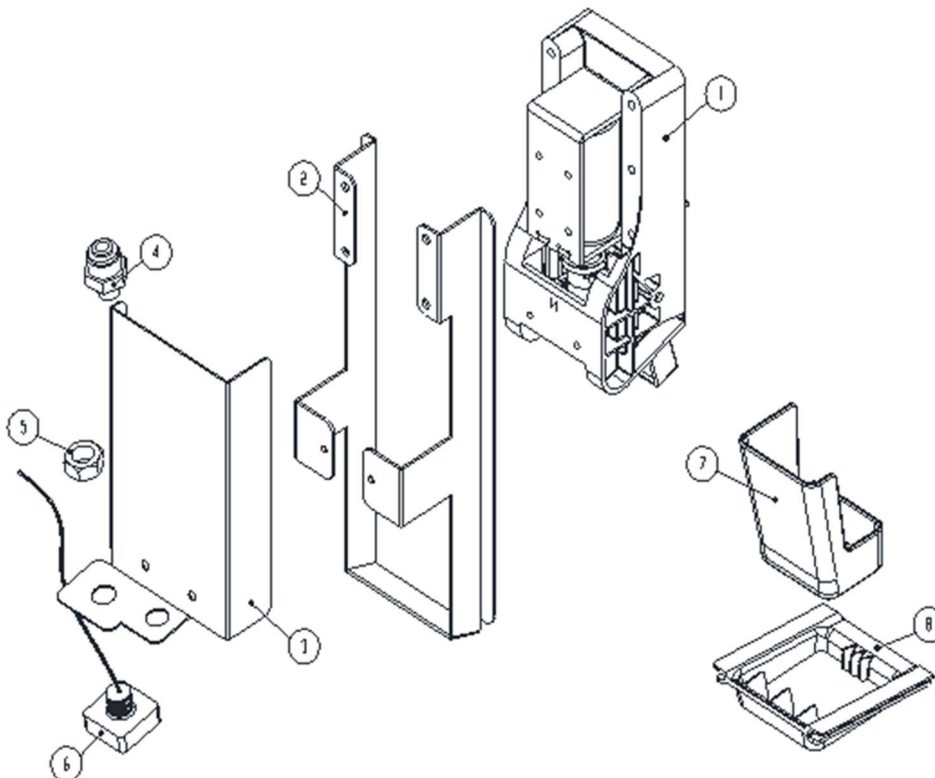


NO	DESCRIPTION	PART #
1	ASSY SHUTTER	427060011
2	WATER GUIDE	301235450
3	BKT UV LED	301236250
4	STRAIGHT ADAPTOR	398013400
5	NUT HEX	215019500
6	UVC WATER PROOF MODULE	500001900
7	SPOUT	318043302
8	COVER SPOUT	318043201

i30 PARTS DIAGRAM (R290 Version)


Recommended Stock Parts

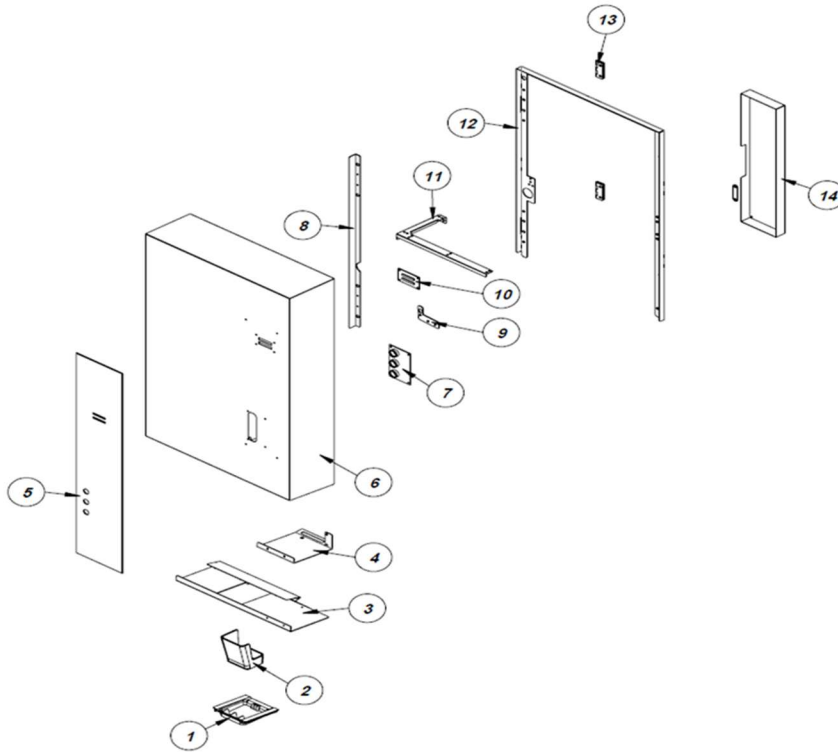


NO	DESCRIPTION	PART #
1	COVER SPOUT	318043201
2	SPOUT	318043302
3	FRONT DOOR BADE D WELD ASSY	301233900
4	LOCKING BASE PLATE	301233301
5	BUTTON DISPLAY	440035001
6	FRONT DOOR WELD ASSY	432053301
7	BUTTON PCB	367016800
8	HINGE BKT	301232700
9	DOOR REINFORCE PLATE	301235500
10	LED PCB	367016901
11	HARNESS BKT	301233201
12	FRONT PANEL BASE	301232600
13	YSH HINGE	321007500
14	BUTTON PCB COVER	301233101

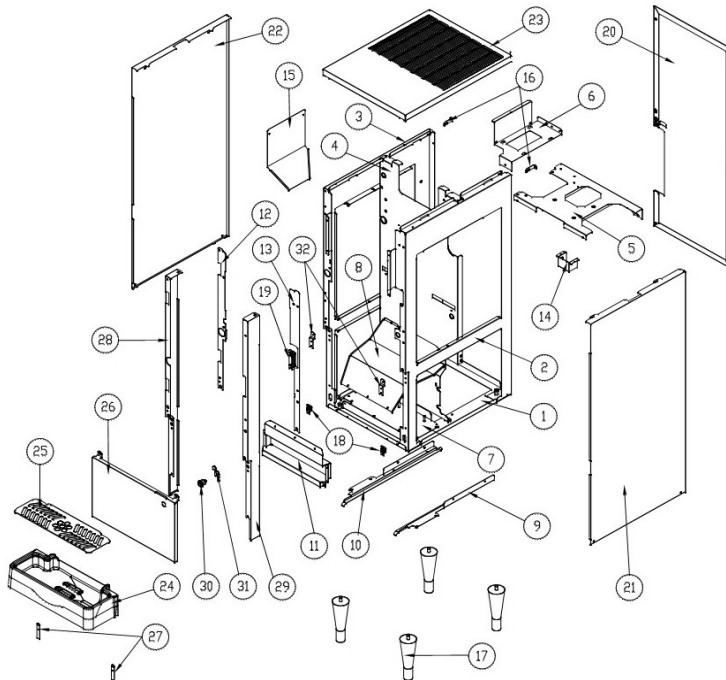


NO	DESCRIPTION	PART #
1	BASE PLATE	332047221
2	RIGHT SIDE ANGLE	332051600
3	LEFT SIDE ANGLE	332051700
4	MIDDLE SIDE ANGLE	332046921
5	AUGER MOTOR BKT ASS'Y	402058100
6	BKT WATER TANK	301202800
7	BKT COMP ASSY	301204131
8	PLATE DRAIN GUIDE	317233800
9	GUIDE AIR FILTER L	332047420
10	GUIDE AIR FILTER R	332047320
11	BKT TOP DRAIN	301234200
12	SPACER PLATE_L	301232300
13	SPACER PLATE_R	301232200
14	KIOSK PCB BKT	301234500
15	DRAIN GUIDE PLATE	301203500
16	TOP COVER BKT	301236300
17	FOOT EXPORT	302006820
18	DOOR LOCK	631000700
19	BKT LOCKING MAGNET	301183150
20	BACK PANEL	301235300
21	PANEL SIDE R	301234000
22	PANEL SIDE L	301234100
23	TOP COVER	317217950
24	DRAIN BOX	336029601
25	DRAIN BOX GRILL	301236150
26	FRONT PANEL DOWN	301233400
27	BKT LOCKING HOOK	301181400
28	FRONT SIDE PANEL_L	301232400
29	FRONT SIDE PANEL_R	301232500
30	LOCKING DEVICE	219003800
31	LOCK PLATE	301178201
32	FRONT PANEL LOWER BKT	301234300

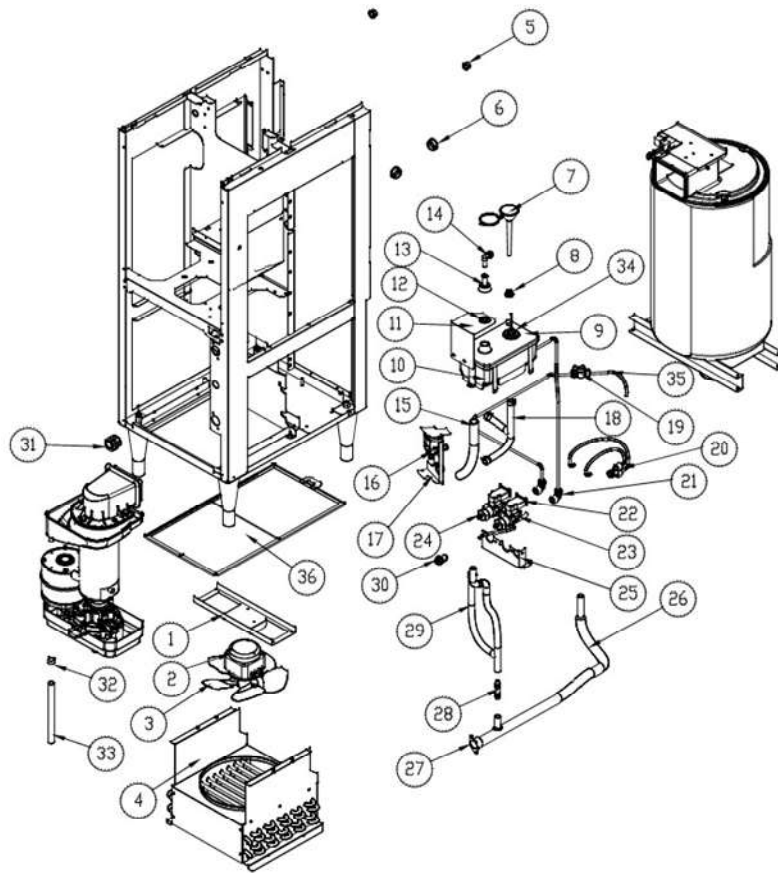



NO	DESCRIPTION	PART #
1	BKT FAN MOTOR	301205600
2	FAN MOTOR/EURO/82UL-4027	353035800
3	FAN	308004700
4	CONDENSER ASSY (115V/60Hz)	411035320
5	GROMMET BUSHING	232003600
6	GROMMET BUSHING	232003500
7	FUNNEL	318039300
8	FUNNEL PACKING	303037200
9	WATER RESERVOIR COVER	654000301
10	WATER RESERVOIR	654000200
11	BKT WATER TANK COVER	301218300
12	BUSHING(PIPE)	232004900
13	RESERVOIR INLET	319007801
14	STEM ELBOW	398015000
15	SILICON HOSE	229029500
16	DRAIN VALVE	340035100
17	BKT DRAIN	301253601
18	MULTIPLE WATER HOSE	229033602
19	SPEEDFIT TO SPEEDFIT CONNECTOR	398012410
20	Unequal Divider	398019400
21	REDUCING ELBOW	398013700
22	WATER VALVE CAP	319007900
23	WATER VALVE	340029401
24	TAP ADAPTOR	398011600
25	DRAIN V/V BKT	301236700
26	HOSE DRAIN A	229035200
27	SOCKET PT3/4"	215019000
28	NIPPLE	398011401
29	HOSE DRAIN B	229035300
30	BULKHEAD CONNECTOR	398019300
31	CABLE GLAND	227001200
32	BAND SPRING 16	203003200
33	SILICON HOSE	229029400
34	ASSY WATER LEVEL SENSOR	722014501
35	PE TUBE (O.D 1/4")-BLACK	229013610
36	AIR FILTER	640009002

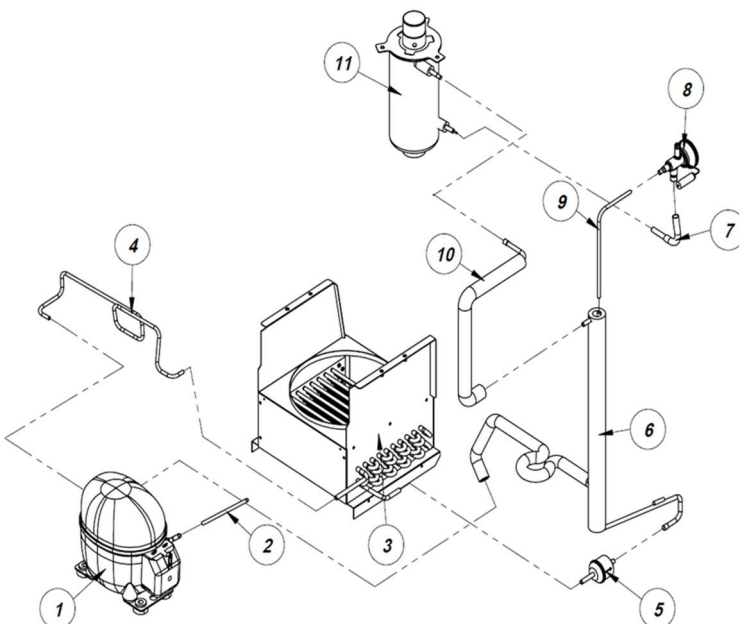


NO	DESCRIPTION	PART #
1	COMP/NEU6214U	394025500
2	CHARGE NIPPLE-Ø6.35xL180	104002600
3	CONDENSER ASSY	411035320
4	DISCHARGE PIPE ASSY	325158620
5	FILTER DRYER	372001610
6	SUCTION PIPE ASSY	325158920
7	EXPANSION OUTLET PIPE	325159210
8	EXPANSION VALVE	340034200
9	EXPANSION INLET PIPE	325159310
10	EVA OUTLET PIPE (R-290)	325159510
11	EVAPORATOR FORM ASSY	409044310

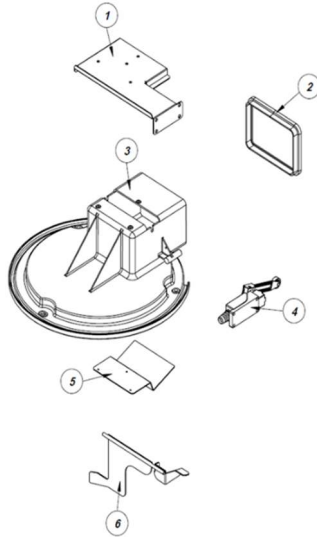


NO	DESCRIPTION	PART #
1	ICE CHUTE COVER	317219001
2	COVER SHUT	303042000
3	HOPPER COVER	318041401
4	ASSY FULL LIMIT SWITCH	722018610
5	ICE GUIDE PLATE	301226400
6	ACTUATOR SHAFT ASSY	610035601

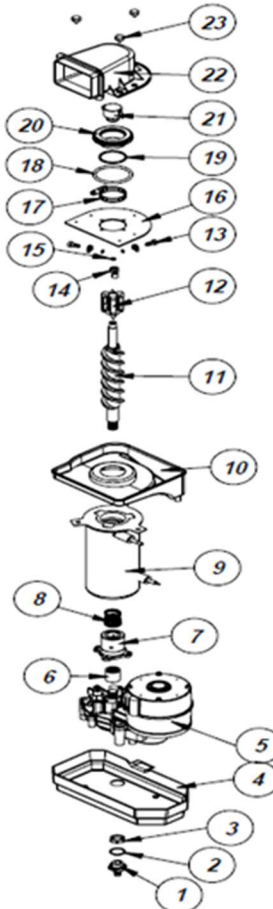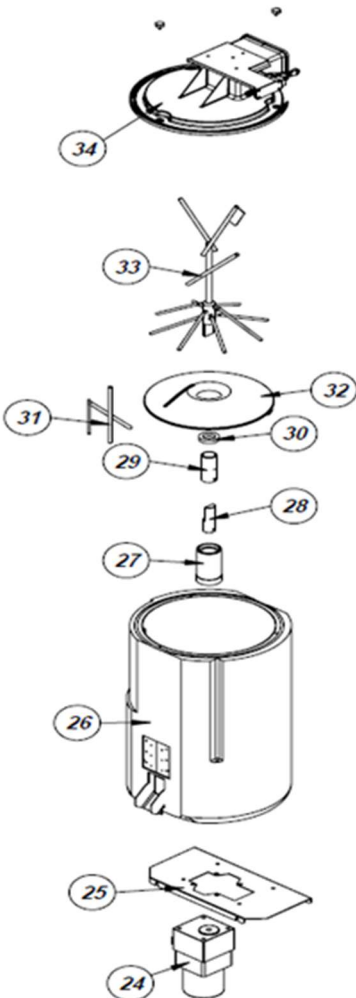

NO	DESCRIPTION	PART #
1	HOSE NIPPLE (PACKING)	215021000
2	O-RING (AN-120)	303044600
3	VESSEL NUT	215020000
4	GEAR MOTOR DRAIN PAN	610035750
5	AUGER MOTOR ASSY	406026410
6	SPLINE COUPLING	612000800
7	HOUSING ASSY	491000900
8	MECHANICAL SEAL	303036900
9	EVAPORATOR ASSY	409044310
10	DRIP PAN	604003200
11	AUGER	430005000
12	EXTRUDING HEAD ASSY	491000801
13	HEX WRENCH BOLT SEMS	210820700
14	HEAD LOCKING WASHER	443062601
15	O-RING NBR	303032000
16	FLANGE SPOUT	301199500
17	HOSE CLAMP 2"	229026710
18	PACKING	303041800
19	O-RING	303037500
20	HOLD SPOUT	395007800
21	IMPELLER ICE ASSY	390001510
22	SPOUT	450000600
23	HAND SCREW(BLACK)	210804502
24	AGITATOR MOTOR ASSY	406027613
25	HOPPER SUPPORT BASE	301202501
26	HOPPER ASSY	442009900
27	BEARING POM	310007300
28	MAIN SHAFT ONE	314044600
29	MAIN SHAFT TWO	314044700
30	REDENAR	379003700
31	MIXING BAR ASSY	436004200
32	ICE BASE PLATE	610035400
33	AGITATOR ASSY	436003800
34	HOPPER COVER ASSY	420054120



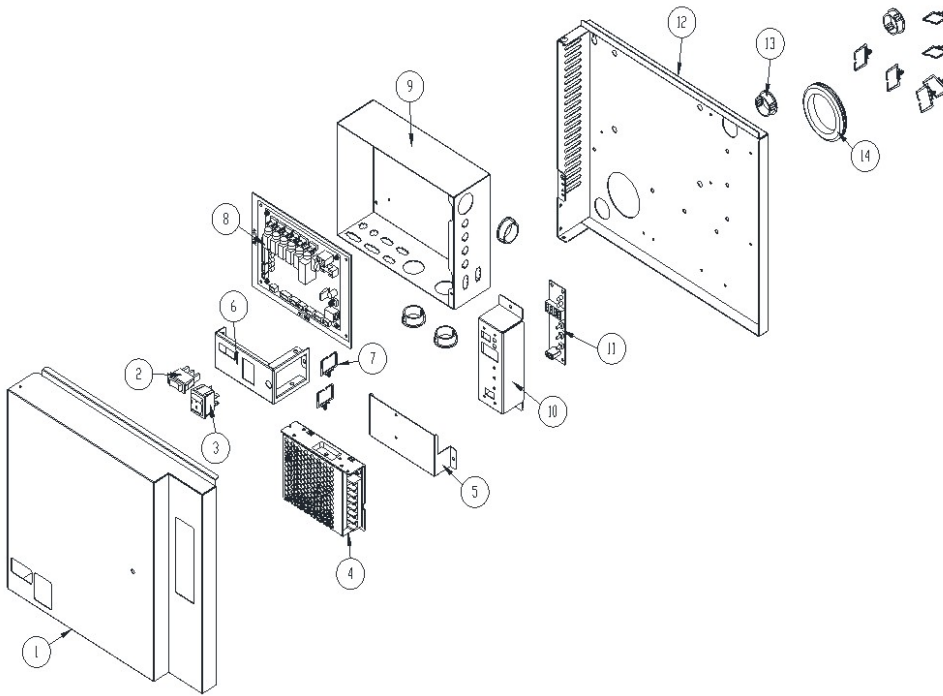


NO	DESCRIPTION	PART #
1	CONTROL BOX COVER	301234711
2	IOW SWITCH	355009800
3	POWER SWITCH	355012400
4	SMPS	629001700
5	SMPS BKT	301234911
6	SWITCH BKT	301234810
7	WIRE SADDLE	209000700
8	ASSY MAIN PCB	415013600
9	CONTROL BOX	374152811
10	FND USB PCB BKT	301235011
11	ASSY FND USB PCB	415012900
12	CONTROL BOX BASE	301235110
13	GROMMET BUSHING	232003500
14	BUSHING	232005900

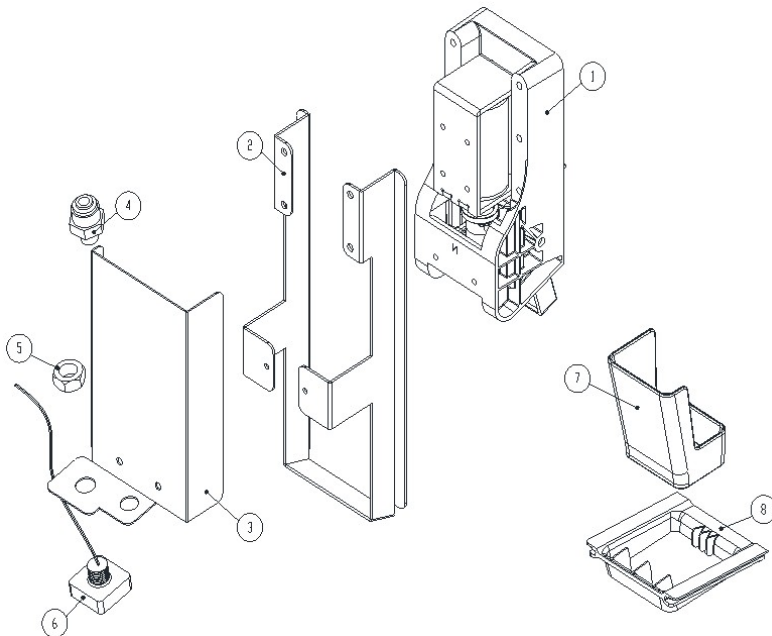


NO	DESCRIPTION	PART #
1	ASSY SHUTTER	427060011
2	WATER GUIDE	301235450
3	BKT UV LED	301236250
4	STRAIGHT ADAPTOR	398013400
5	NUT HEX	215019500
6	UVC WATER PROOF MODULE	500001900
7	SPOUT	318043302
8	COVER SPOUT	318043201

i30 WATER FLOW DIAGRAM

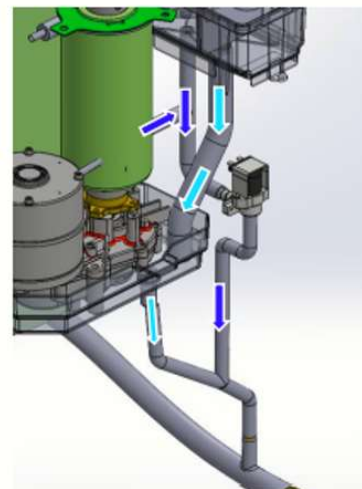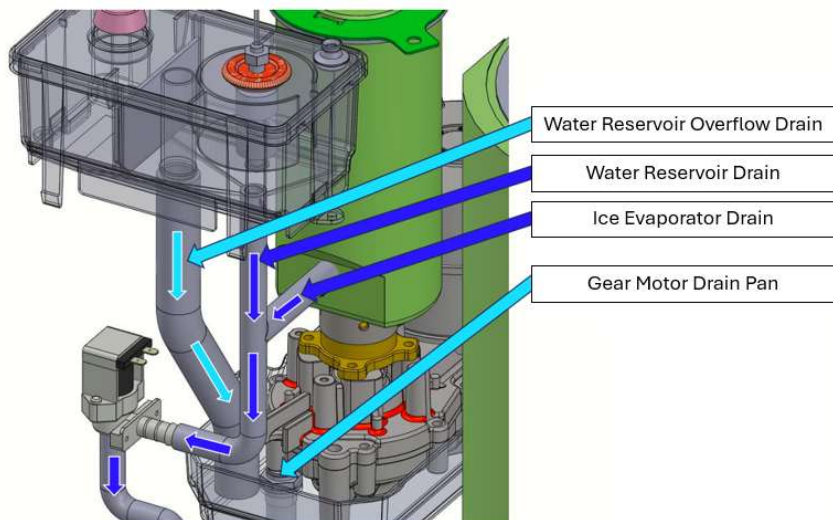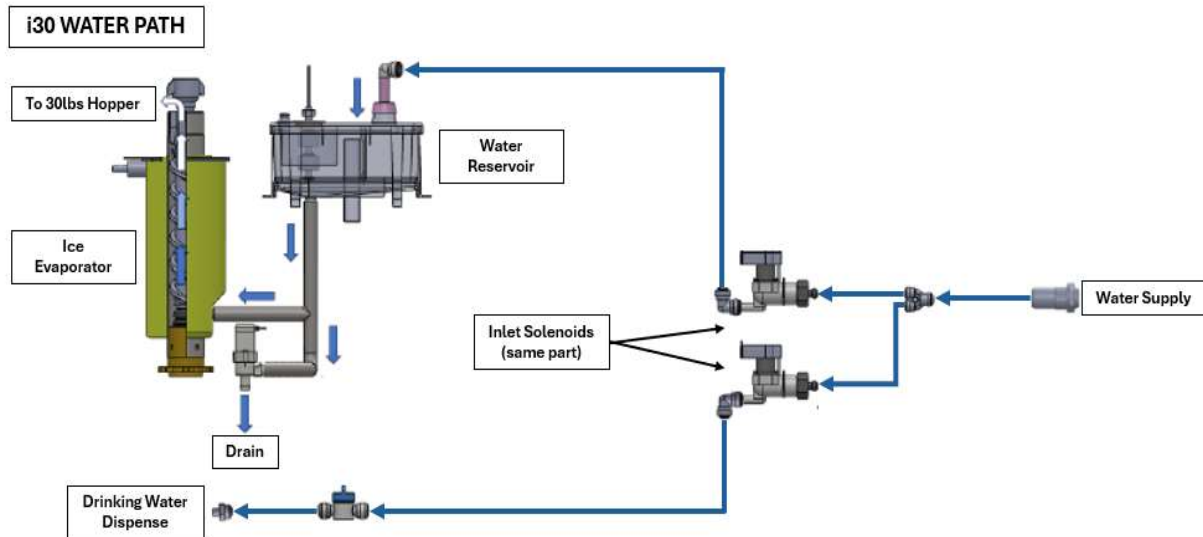


i30 ELECTRICAL DIAGRAM (R404a Version)

⚠ DANGER! HIGH VOLTAGE ELECTRICAL HAZARD. PCB (Printed Circuit Board) contains High Voltage. Only trained and qualified technicians should attempt live testing.

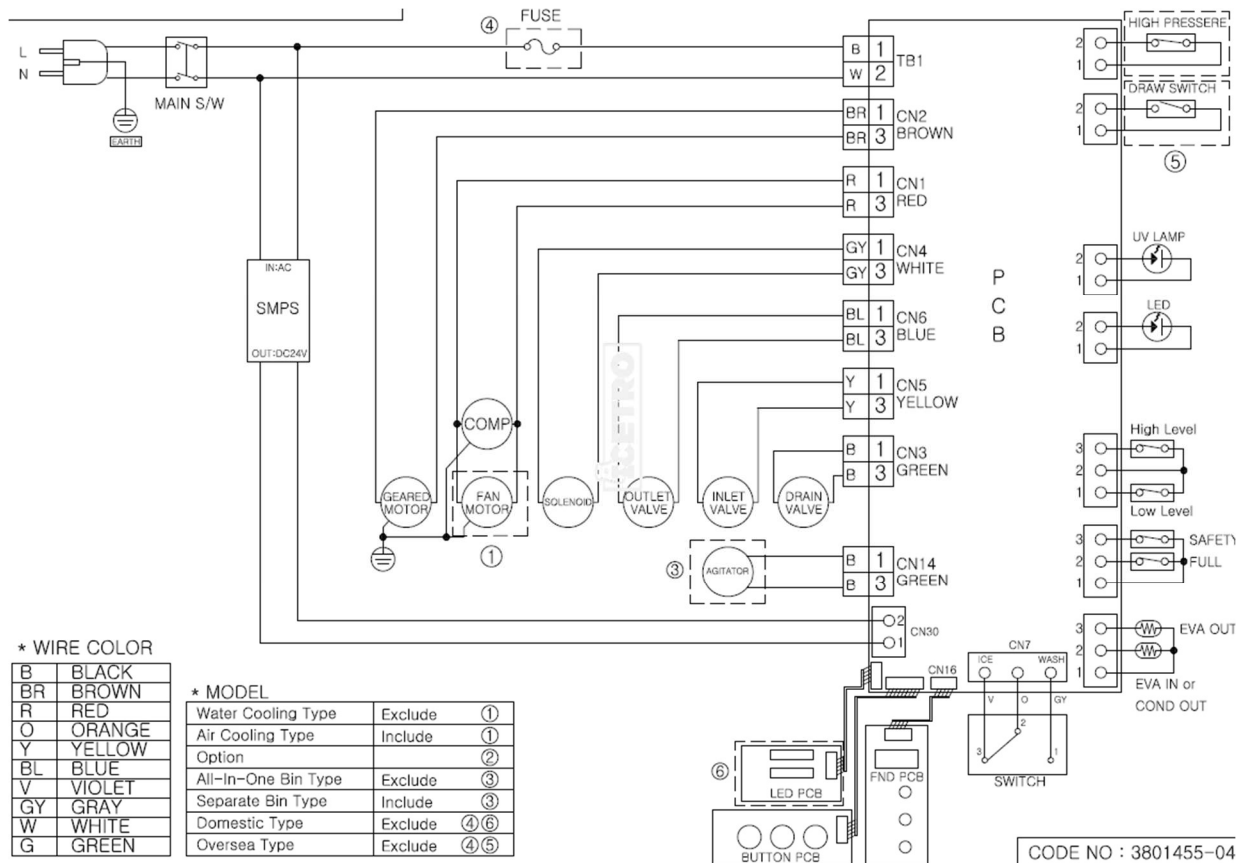

i30 ELECTRICAL DIAGRAM (R290 Version)

⚠ DANGER! HIGH VOLTAGE ELECTRICAL HAZARD. PCB (Printed Circuit Board) contains High Voltage. Only trained and qualified technicians should attempt live testing.

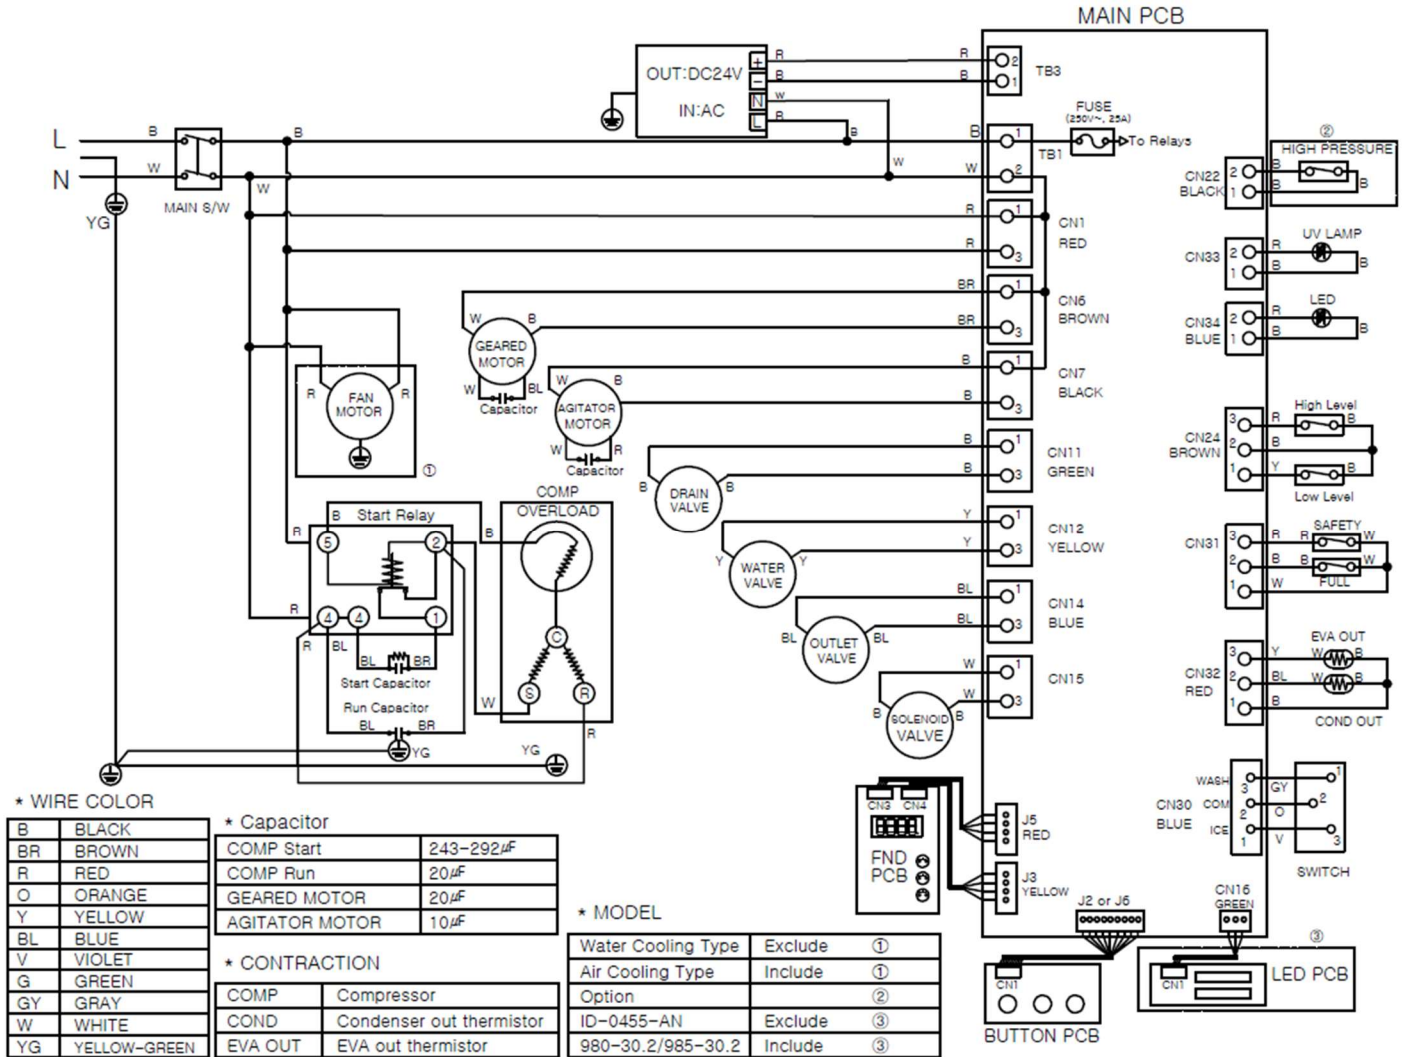

PRE-INSTALLATION



DANGER! ELECTRICAL SHOCK HAZARD.

*Only qualified personnel who have read and understand this entire manual should attempt to install, or service this **I30 Water Dispenser**, failure to do so could result in death or serious injury. DO NOT plug into an electrical supply until specifically instructed.*



WARNING! ALWAYS SANITIZE BEFORE USE.

Sanitize before use to eliminate any potential microbiological contaminants.

Materials Needed:

- Personal Protective Equipment. Rubber or Nitrile Safety Gloves and Protective Eyewear
 - Phillips Screwdriver
 - Water Pitcher or Container to collect water from the faucet
 - 5-gallon container or drain basin
 - Sanitizer – IMS-III Sanitizing Concentrate (recommended)
 - 3/8" Plastic Tubing, at least 10 feet in length, and assorted 3/8" quick connect fittings
 - TDS Meter and Test Strips for measuring chlorine – Optional
1. Unpack the **Wellsys I30 Water Dispenser** and check exterior for damage.



CAUTION! FILTER FLUSH REQUIRED.

***I30 Ice and Water Dispensers** are supplied with a filter. The frequency of filter changes depends upon your water quality and your water usage. For example, if there is a lot of sediment and/or particles in your water, then you will have to change your filter more frequently than a location with little to no sediment. Be sure to replace your filter whenever you notice a decline in the performance, whether it is a drop of flow rate and/or pressure or an unusual taste in the water.*

2. Flush filter thoroughly per filter manufacturers' recommendation with fresh water to drain. More details are provided in the **Filter Flushing** section further down.

NOTE: Filter should not be flushed prior to 24 hours before installation to limit Microbial Growth inside of filters.

NOTES ON INSTALLATION

1. Do not install the product at the following locations:
 - Near Fires
 - Near Flammables
 - In Humid Places
 - In front of air conditioners
 - Where exposure to rain or snow is possible
 - Outdoors or in direct sunlight
 - Near chemicals (volatile materials, organic solvents, etc.)
 - Near toilets
 - Anywhere the temperature may fall below 50°F.
2. Use source water within following quality range:
 - Water pressure: 30-60psi
 - Water temperature: 39-100°F (4-38°C)
 - Turbidity: 0.5 NTU or less
 - pH: 5.8-8.5
 - Hardness: 300ppm or less
 - Water Quality: Water quality meeting the Drinking Water Quality standard

*Please consult your distributor if source water quality is out of the specified range.

*The warranty will be void if the product is connected to source water that is out of the specified range.

*This product is not equipped with internal filtration. It is intended to be connected only to a potable water source.

3. When transporting the product, do not tilt it more than 45° from vertical.

*Severe tilting can cause a performance degradation.
4. Install the product on a flat surface and adjust the level of the unit using a level gauge.

*If the product is tilted more than 3°, overflow may occur.
5. Source water should not be above 100°F (38°C)

*Hot water may cause performance degradation or system failure.
6. Keep the sides at least 5" away, the rear of the unit at least 8" away, and the top of the unit at least 14" away, from walls/ceilings or other objects for ventilation.
7. Do not bend the source water or drain hose or place heavy objects on them.

*If either are blocked, the water will not flow smoothly to and from the unit, and may cause performance degradation.
8. Do not place any heating system near the rear of the unit.
9. The power supply, source water, and drain must be directly connected to the unit.

FILTER FLUSHING PROCEDURE

The **Wellsys i30 Ice and Water Dispenser** is paired with a single ICE10K filter, a Fiber-Core Filter with Phosphate for Scale Reduction. This filter must be flushed prior to installation into the units water supply. To flush, follow the procedure below:

1. Insert and lock the filter cartridge into the filter head.



2. Connect the inlet of the filter head to the water supply using 3/8" LLDPE tubing. Take note of the small arrow on top of the head indicating the proper flow direction. Using the same tubing, connect a length of tube to the outlet of the filter head, such that it can be routed to a drain or sink.



3. Turn on the water and check for leaks at both ports of the filter head, and between the filter and filter head union. If leaks occur, and cannot be diagnosed, call Product Support.



4. Allow 5 gallons of water to run through the filter. Once complete, shut the water off, and continue to the **Filter Installation** section.


i30 INSTALLATION

SETTING THE I30 ON THE BASE (if Freestanding)

To place the unit safely and properly onto the Base Cabinet, follow the procedure below.

NOTE: Moving this unit is a two-person lift.

1. Using a level, adjust the legs on the base to ensure the base is level prior to setting the I30 on the base.
2. The legs of the ice machine will sit on the rails on top of the base. **Pro Tip:** Remove the base door so that it is not in the way when walking the ice unit onto the base. Reinstall it once the unit is set on base.

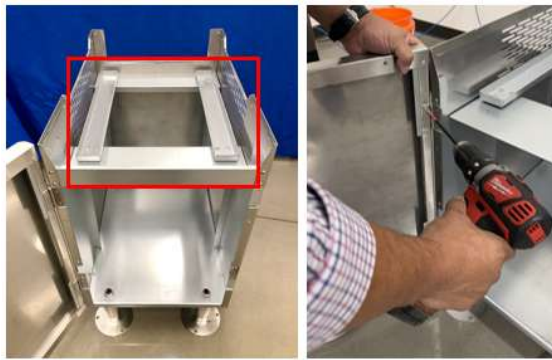

3. Remove the drip tray from the unit by pulling it straight out from the front. This will provide a grip point when it comes time to lift and walk the unit onto the base. The second grip point is the bottom back of the unit. Make sure to grab inside of the legs.



4. Grab hold of the unit and using your legs, lift the unit. Carefully walk the unit onto the base and set it down with the legs on the base rails.

NOTE: Again, to move this unit requires a two-person lift.



INSTALLING THE SUPPORT BRACKETS (if Freestanding)

The Base Cabinet has two support brackets included in the box that can be used to secure the unit to the Base Cabinet. The following procedure outlines how to install them.

1. The i30 Support Brackets secure the unit to base. The pair of brackets come with four screws. Remove the bottom screws from the side panels of the unit and set them aside.



2. Secure the Support Bracket to the base using the screws provided with the bracket. Using the screws from the side panel that were set aside, secure the Support Bracket to the ice machine.



DRAIN KIT INSTALLATION

The following procedure outlines how to properly install the included drain kit onto the unit.

1. Locate the provided brass $\frac{3}{4}$ " NPT x 1" Barb fitting. Apply Teflon Tape to the threads and screw the fitting into the unit in the location shown.



2. The provided drain kit consists of the Molded Drain Line, 3 worm gear clamps, and one female $\frac{3}{4}$ " NPS x 1" Barb fitting that will accept $\frac{3}{4}$ " NPS x $\frac{1}{2}$ " CTS.



3. Route drain kit from the rear and bottom of the unit and clamp the 1.25" end of the drain kit on to the drip tray port with the provided clamp. Next clamp the 90° end of the drain kit onto the 1" brass barbed fitting on the I30. The dogleg of the drain hose can be connected to any 1" barb fitting using the last clamp to adapt to the desired drain solution.



CONDENSATE PUMP INSTALLATION

It is recommended that if the unit cannot be installed in close proximity to a floor drain (10ft or less), a condensate pump should be used to pump the drain water to an external drain. The following procedure outlines how to install a condensate pump to use with the unit.


1. Place the condensate pump at the rear of the unit, and connect to power.
2. Using desired tubing, route the outlet of the condensate pump to the drain. It is recommended, and if possible, to use a one-way check valve on this line.
3. Connect the dogleg of the molded drain line to the collection port of the condensate pump using desired tubing or hose solution. Materials to accomplish this are not included with the unit, and should be selected and used at the sole discretion of the installer. The photos shown use ½" rigid PEX line to route to the condensate pump.



FILTER INSTALLATION

To install the filter, follow the steps outlined below:

1. The Filter Head Bracket should be mounted with two screws to the back of the unit. The Filter Head Bracket and Filter Assembly can be mounted using only one screw in a pre-existing hole, but it is recommended to mark and drill a second screw hole in the back panel of the unit. The hole should be drilled 18.25" down from the top edge of the back panel, 2.5" to the right of the existing hole shown.

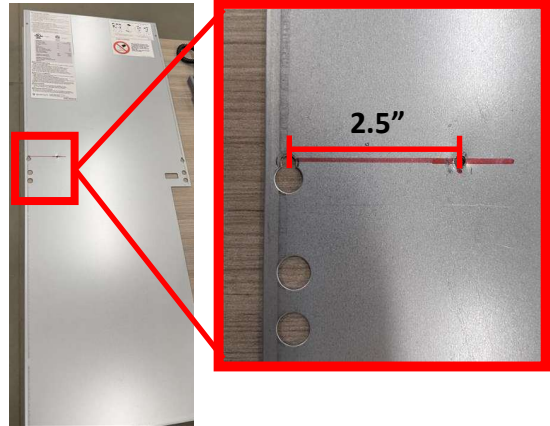

2. Secure the filter bracket in place using the existing screw that holds the panel in place and a provided screw. Then secure the filter head onto the bracket and install the filter making sure it locks in place.



3. After adapting to the cold-water side of the water source, insert 3/8" tubing into the "IN" port of the filter head. Assuming the filter has already been flushed, run 3/8" tubing from the "OUT" port of the head to the bulkhead on the ice machine. Turn water "ON" and check for leaks. **NOTE:** Max water pressure is 60psi.



SANITIZING THE UNIT

Before starting the sanitizing or normal operation, any filter(s) being used to filter the source water for the unit must be flushed. **DO NOT install and setup the unit before flushing the filter(s).** Listed below are the steps to properly sanitize the **Wellsys i30 Ice and Water Dispenser**.

What you will need:



- Safety Glasses
- IMS-III Sanitizing Concentrate (Recommended)
- 1-gal Pitcher
- Nitrile Gloves
- WypAll Towels for sanitizing processes
- Microfiber towels – Exterior
- 1 32oz spray bottle
- Step Stool or Ladder

Sanitizing Solution

Prepare the recommended “Sanitizing Solution” by mixing 1.6oz of IMS-III Sanitizing Concentrate with 1 gallon of water. The label on the bottle is marked and each mark represents 1.6oz. **Pro Tip:** To produce a suds free Sanitizing Solution, fill the 1-gallon container with water first, then pour the concentrate solution into the pitcher of water and stir.




Remove the sprayer from the spray bottle and fill the bottle with sanitizing solution from the pitcher. Leave the sprayer off and set the bottle aside. The bottle will be used to fill the water reservoir during the sanitizing process which will use up to 2 liters, so the bottle will need to be filled twice.




1. Open the Front Door Panel of the unit. To do this, simply use a flathead screwdriver to turn the slotted key counter-clockwise to unlock the panel. Then, give a firm pull on the bottom lip of the door panel.



2. Remove the Top Panel. After opening the Front Door Panel, locate the two screws circled in **RED** and set them aside. Pull the panel about 1" forward, lift, and remove.

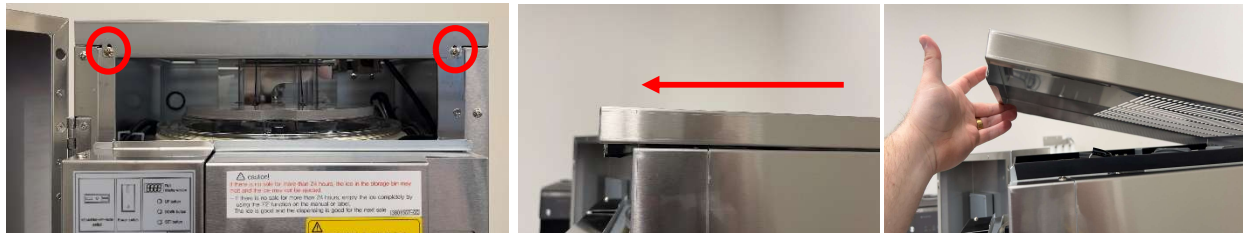


3. With the water supply "ON", set the "Ice-Off-Wash" (IOW) switch to "Off" and then turn the Main Power switch "ON".

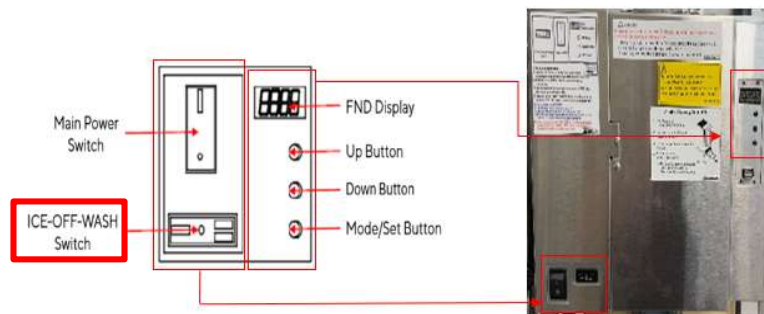

4. Remove the top cover to the unit then remove the hopper cover by removing the three white colored thumb screws around the perimeter of the cover, circled in **RED**. The lid has a switch connected to a cable. There is no need to disconnect this, as there is enough slack in the cable to set the lid aside without disconnecting.





5. Facing the unit, remove the ice dispense auger components from the ice hopper and set them aside. There is the main auger, and a smaller piece that slides into a guide plate inside the hopper. Remove this smaller piece as well.

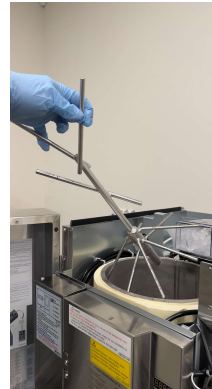

6. Using the prepared solution in the spray bottle, pour 1.5 liters into the Sanitizing/Descal Funnel on the top of the reservoir and allow to sit for 10 min. The bottle will have to be refilled, as it holds approx. 1 liter. Using a larger mouth funnel (pictured) in the smaller Sanitizing/Descal Funnel will make it easier to fill the reservoir.




7. Remove the three thumb screws (circled in **RED**) that hold the Auger Housing in place and remove the housing. Spray the auger housing with the sanitizing solution and wipe it dry. Spray the top portion of the auger and wipe it dry with a clean paper towel or clean microfiber towel, then reinstall auger cover.

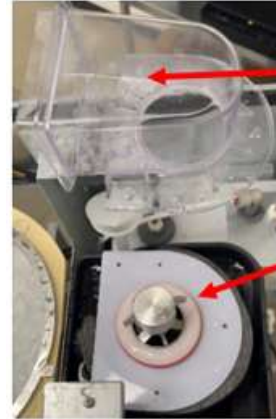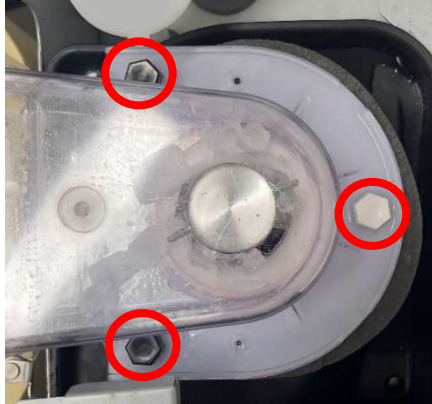

Spray w/ sanitizer & wipe clean


Spray w/ sanitizer & wipe clean

8. Spray the inside of the hopper and auger components with sanitizing solution and let sit for 5 minutes then wipe dry. Reinstall the auger components into the hopper. **NOTE:** The auger can only be installed one way, by sliding into the half-moon slot at the bottom of the hopper. Reinstall the hopper cover.

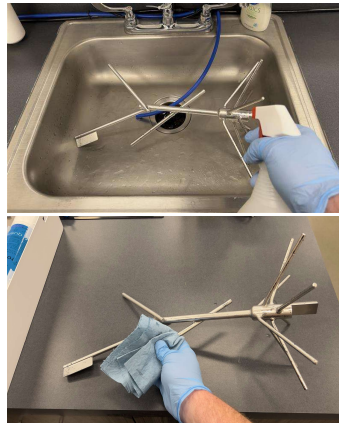

9. 10min after adding the sanitizer to the Sanitizing/Descal Funnel, turn the IOW switch to "Wash".

10. The auger will rotate for 5 minutes churning the solution inside the auger housing, then the water reservoir and auger will drain for one minute.

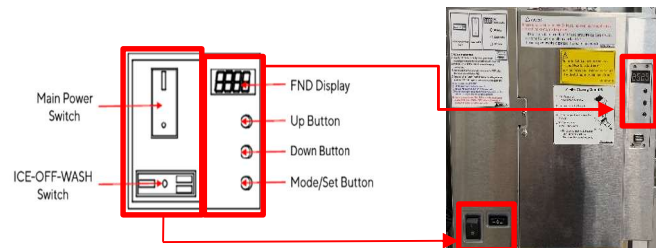

11. Next, the unit will perform 3 rinse cycles. The reservoir will fill with water, and then the auger will churn for 1 min then drain for 30 seconds, and this will repeat 2 more times. After the rinse cycle, set the IOW switch to "OFF".

12. Turn off the water supply and add a 3' piece of tubing the "OUT" port of the filter. This tubing can be used to gently rinse the sanitizing solution from the ice hopper.
13. Perform a "Forced Drain Function" to drain the reservoir of any remaining water.
To perform the **Forced Drain Function**: With the Main Power Switch set to "ON," press the "DOWN" + "MODE/SET" buttons simultaneously for 3 seconds on the FND (Flexible Numeric Display) panel. Water will purge from the water reservoir and auger housing for 90 seconds.
14. Reinstall the Hopper Cover and reinstall the Top Cover.
15. Turn the water supply on and set the IOW switch to "Ice".
16. The unit will fill with water and begin making ice, and the Sanitizing Procedure is complete.

Assuming the filter has been flushed and installed, the drain kit and condensate pump or drain connection have been set up and/or installed, and the unit has been set into place, the **Wellsys i30 Ice and Water Dispenser** is now ready for use.

i30 PM GUIDE

To ensure proper function and effectiveness of the **Wellsys i30** unit, preventative maintenance must be performed on a timely basis, at a bare minimum of once per year, but recommend at least every 6 months. PMs typically consist of filter changes but do also require hopper, auger, and reservoir descaling on a yearly basis, especially if not using RO filtration. The filter change schedule is listed below. [DO NOT run the filtration system in the unit before flushing the filters.](#)

It is imperative to regularly change the filters on the Wellsys i30 unit every 6 months. Changing the filters keeps the tanks clean and the water and ice tasting fresh. Failing to change filters regularly can also cause premature degradation of the auger assembly, which can increase maintenance costs. [Refer to the filter flushing guide for the proper flushing procedure.](#)

Regularly descaling the unit will also help to improve the water quality and prevent costly maintenance (or even replacement) of the auger assembly. The descaling procedures are outlined below.

DESCALING PROCEDURE

The following procedure outlines how to properly descale the auger assembly, hopper, and reservoir.

What you will need:



Nitrile
Gloves



Safety Glasses



SafeClean Plus



1-Gallon
Pitcher



Step
Stool/Ladder



WypAll Lint Free
Towels



Microfiber
Towels



32oz Spray
Bottle

- Safety Glasses
- SafeClean Plus (Recommended)
- 1-gal Pitcher
- Nitrile Gloves
- WypAll Towels for descale processes
- Microfiber towels – Exterior
- 1 32oz spray bottle
- Step Stool or Ladder


1. Begin by preparing a “Descaling Solution” by mixing a half bottle (4oz) of SafeClean Plus ice machine descaling solution with 60oz of hot water, making a total solution of 1/2-gallon.
2. Remove the sprayer from the spray bottle and transfer descale solution from the pitcher to the bottle. Leave the sprayer off and set the solution aside. The bottle will be used to fill the water reservoir during the descale process. The process will use up to 2 liters so the bottle will need to be filled twice. **Pro Tip:** To produce a suds free descaling solution, fill the 1-gallon container with water first, then pour the descaler into the water and stir.




3. Open the Front Door Panel of the unit. To do this, simply use a flathead screwdriver to turn the slotted key counter-clockwise to unlock the panel. Then, give a firm pull on the bottom lip of the door panel.



4. Remove the Top Panel. After opening the Front Door Panel, locate the two screws circled in RED and set them aside. Pull the panel about 1” forward, lift, and remove.

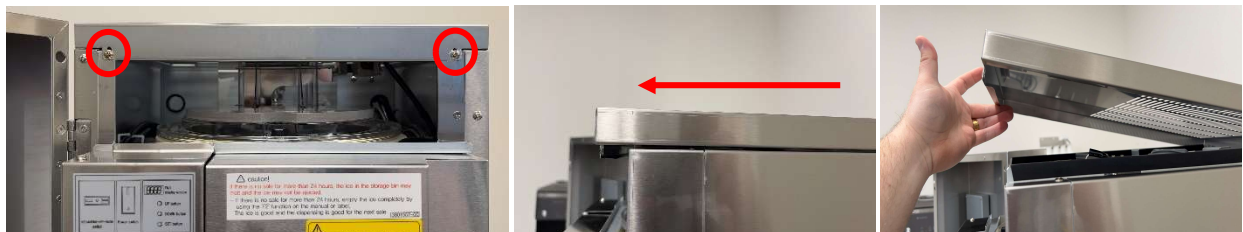

5. With the water supply “ON”, set the “Ice-Off-Wash” (IOW) switch to “Off” and then turn the Main Power switch “ON”.

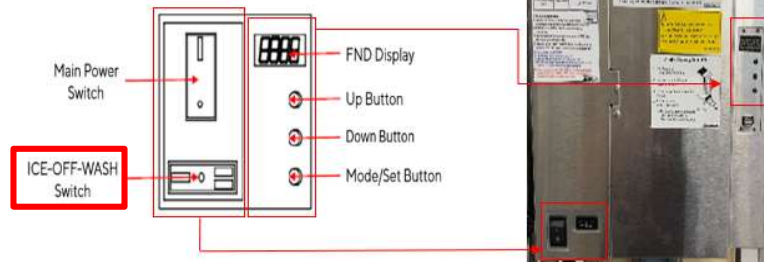

6. Perform a “Forced Drain Function” to drain the reservoir of any remaining water. To perform the **Forced Drain Function**: With the Main Power Switch set to “ON,” press the “DOWN” + “MODE/SET” buttons simultaneously for 3 seconds on the FND (Flexible Numeric Display) panel. Water will purge from the water reservoir and auger housing for 90 seconds.

7. Remove the top cover to the unit then remove the hopper cover by removing the three white colored thumb screws around the perimeter of the cover, circled in **RED**. The lid has a switch connected to a cable. There is no need to disconnect this, as there is enough slack in the cable to set the lid aside without disconnecting.




8. Facing the unit, remove the ice dispense auger components from the ice hopper and set them aside. There is the main auger, and a smaller piece that slides into a guide plate inside the hopper. Remove this smaller piece as well.




9. Using the prepared solution in the spray bottle, pour 1.5 liters into the Sanitizing/Descal Funnel on the top of the reservoir and allow to sit for 10 min. The bottle will have to be refilled, as it holds approx. 1 liter. Using a larger mouth funnel (pictured) in the smaller Sanitizing/Descal Funnel will make it easier to fill the reservoir.



10. Remove the three thumb screws (circled in RED) that hold the Auger Housing in place and remove the housing. Spray the auger housing with the descaling solution and wipe it dry. Spray the top portion of the auger and wipe it dry with a clean paper towel or clean microfiber towel, then reinstall auger cover.

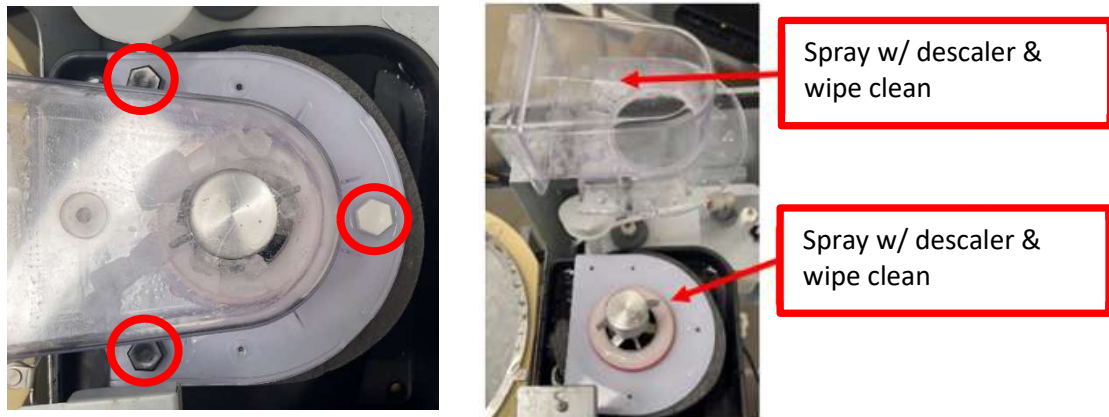


11. Spray the inside of the hopper and auger components with descaling solution and let sit for 10-15 minutes, this will be rinsed later. Reinstall the auger components into the hopper. NOTE: The auger can only be installed one way, by sliding into the half-moon slot at the bottom of the hopper. Reinstall the hopper cover.

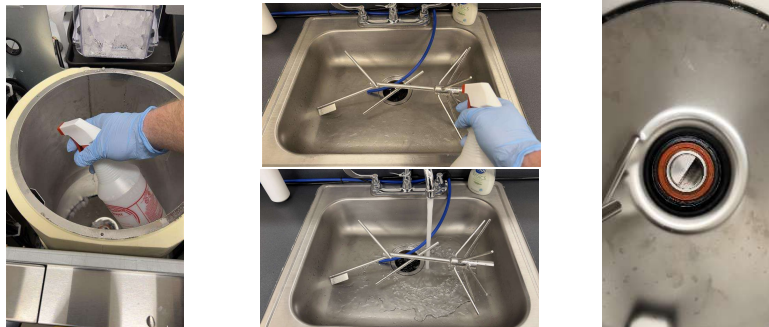

12. 10min after adding the descaler to the Sanitizing/Descal Funnel, turn the IOW switch to “Wash”.

13. The auger will rotate for 5 minutes, churning the solution inside the auger housing, then the water reservoir and auger will drain for one minute.

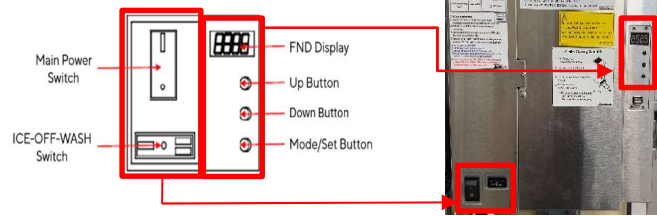

14. Next, the unit will perform 3 rinse cycles. The reservoir will fill with water, and then the auger will churn for 1 min then drain for 30 seconds, and this will repeat 2 more times. After the rinse cycle, set the IOW switch to “OFF”. After the rinse cycle, set the IOW switch to “OFF.”

15. Turn off the water supply and add a 3’ piece of tubing the “OUT” port of the filter. This tubing can be used to gently rinse the descaling solution from the ice hopper.

16. Perform a “Forced Drain Function” to drain the reservoir of any remaining water. To perform the **Forced Drain Function**: With the Main Power Switch set to “ON,” press the “DOWN” + “MODE/SET” buttons simultaneously for 3 seconds on the FND (Flexible Numeric Display) panel. Water will purge from the water reservoir and auger housing for 90 seconds.


17. Reinstall the Hopper Cover and reinstall the Top Cover.

18. Turn the water supply on and set the IOW switch to “Ice”.

19. The unit will fill with water and begin making ice, and the Descaling Procedure is complete.

CLEANING THE AIR FILTER

The air filter on the i30 should be cleaned every PM. Remove the drip tray by pulling straight out from the unit and set aside. Locate the air filter underneath the unit and remove it by pulling the filter tab, as shown. Rinse the filter clean under a sink until it is free of debris. Once clean, simply dry the air filter with a lint free towel and reinstall it.

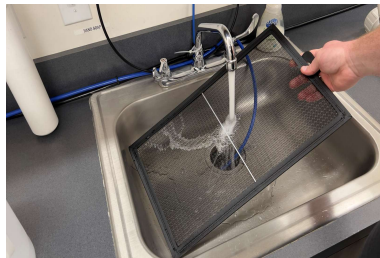


i30 SERVICE ALARM (R290 Model)


To be in compliance with new UL regulations, a Service Alarm was added to i30 units. Operationally, the Service Alarm function will stop ice-making operations and the three UI buttons will blink simultaneously at 180 days after the last cleaning and descale service, and will not cease until the next service is performed. This function is deactivated by default from the factory, but can be switched ON or OFF at will.

If it is desired **not** to have this alarm active, it can be deactivated via the Main PCB of the unit. The instructions below detail how to ensure the Service Alarm is deactivated.

1. Using a screwdriver, open the front cover of the unit and remove the screw holding the PCB cover closed.

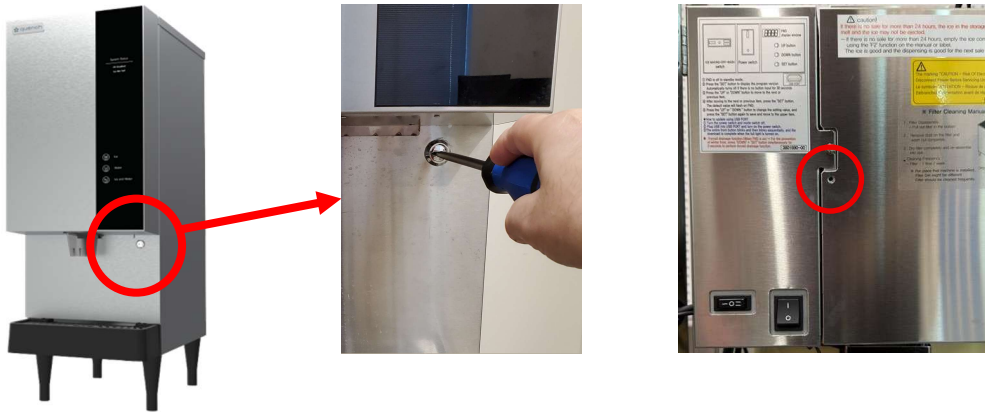

2. Looking at the PCB, locate the set of 2 dipswitches in the middle of the board. Locate dipswitch #2, and move to the OFF position to deactivate the alarm.

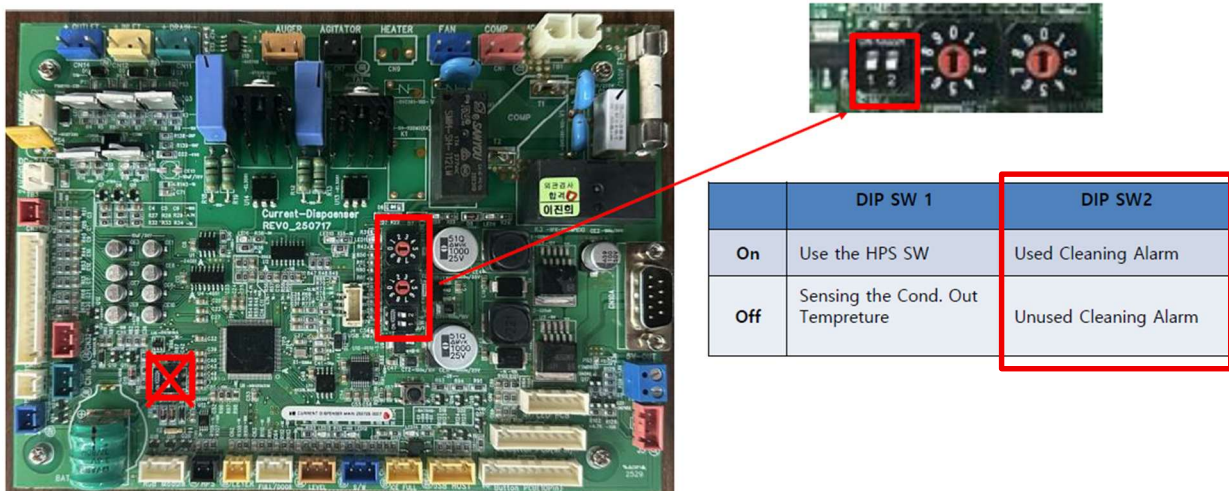


i30 SERVICE ALARM (R404a Model)


To be in compliance with new UL regulations, a Service Alarm was added to i30 units. Operationally, the Service Alarm function will stop ice-making operations and the three UI buttons will blink simultaneously at 180 days after the last cleaning and descale service, and will not cease until the next service is performed. This function is deactivated by default from the factory, but can be switched ON or OFF at will.

If it is desired **not** to have this alarm active, it can be deactivated via the Main PCB of the unit. The instructions below detail how to ensure the Service Alarm is deactivated.

1. Using a screwdriver, open the front cover of the unit and remove the screw holding the PCB cover closed.

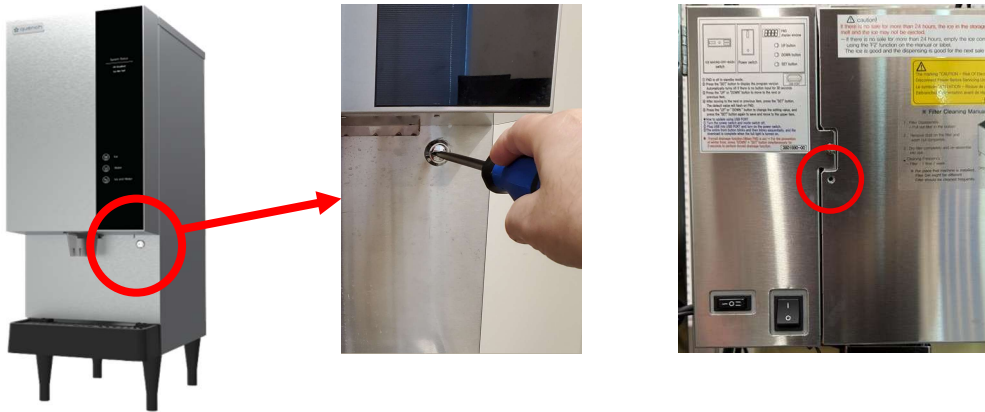

2. Looking at the PCB, locate the set of 2 dipswitches in the middle of the board. Locate dipswitch #2, and move to the OFF position to deactivate the alarm.

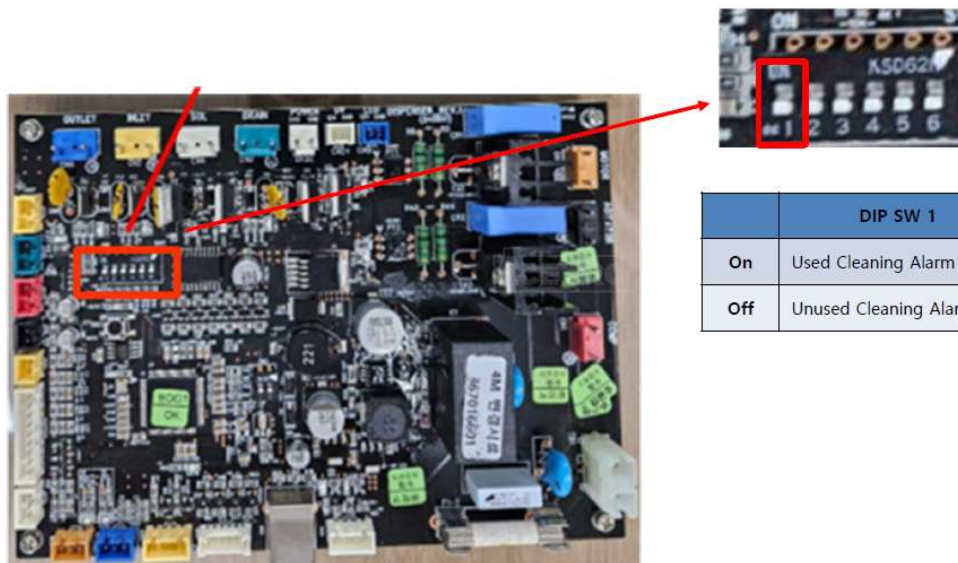

DIP SW 1	
On	Used Cleaning Alarm
Off	Unused Cleaning Alarm

FINAL INSPECTION

After installation and sanitization, verify the following:

1. There are no leaks or loose components.
2. Ice is being produced and is dispensing properly.
3. Water is dispensing from the unit properly.
4. Confirm acceptable product water flow.
5. If the system is not filling, then check the water supply and supply solenoid inside the unit. Also ensure the IOW switch is set to "ICE."
6. Ensure the systems exterior is clean and all components are in place.

Other items to check:

1. Once the system has been flushed it should remain plugged in and water should, at a minimum, be dispensed occasionally. [*Avoid storing in your vehicle or warehouse with residual water in the tank, this will result in a bad taste after installation.](#)
2. Always drain the system before moving it.
3. Never lay the system on its side.

PREVENTATIVE MAINTENANCE

The following is an outline of preventative maintenance that should be performed on yearly or semi-yearly basis to keep the unit running in top shape.

1. Change filters according to the filter change schedule. Always rinse new filters using the same procedure as the original filters.
2. Drain the system and use an approved cleaning agent to sanitize the system as needed as outlined in the sanitization section.
3. Drain the system and use an approved descaling agent to descale the system, at least every 6 months.
4. Check all fittings for signs of scale or wear and replace as needed.
5. Check solenoids for proper function. Dripping solenoids should be replaced immediately.

Every 5 years, in addition to the above, perform the following:

- Replace all internal fittings and tubing.
- Replace solenoids.

SYSTEM INSPECTION

When changing filters or performing service, the following items should be completed:

- Visual Inspection
- Hose & Fitting Inspection
- Electrical Inspection
- Pressure and Flow Test
- Clean the exterior of system and condenser coils on bottom of system.
- TDS Check if using RO filtration
- Site Cleanup

WARRANTY PROCEDURE

Procedure for **Wellsys I30** warranty evaluation:

Contact WELLSYS technical support and provide the following information:

- Serial number
- Failure
- Full details around failure
- Water pressure into the system
- Tap TDS
- Pictures

Depending on the situation, technical support may request more information. Upon approval, WELLSYS will process warranty credit or replacement part to be fulfilled.

FUNCTION CODES

CODE	FUNCTION	DEFAULT/RANGE	RANGE
F1	Max Solenoid Operating Time	20s	1-60s
	Max Water Dispense Time	10s	1-60s
F3	Auto Ice Extraction Setting	OFF	1-F1 Setting Value
F4	Initial Drain Time	30s / 5-99s	5-99s
	Initial Drain Cycle Count	1time / OFF-9times	OFF-9times
F5	Auto Drain Time	30s	OFF-99s
	Drain Interval Time	1hr	0.5-9.5hr
F6	Ice & Water Mode (Ice Time)	5sec	1-F1. 1 Setting Value
	Ice & Water Mode (Water Time)	3sec	1-F1. 2 Setting Value
F7	UV Lamp ON	3min	1-99min
	UV Lamp OFF	1hr	1-9hr
F8	Auger Warning Time	1.0 (10,000hr)	0.1-9.9 (1,000hr)
	Auger Warning Time	1.1 (11,000hr)	0.1-9.9 (1,000hr)
F9	Auger Operation Time Display	0y 00m 01d 23h	Conversion: 1yr to 12mo, 1mo to 30 days, 1 day to 24hr
F10	Temperature Unit Display	° C	° C / ° F
F11	Display for EVA-in, Cond-out, and High-Pressure Detection Temps	1. Display for Eva-in 2. High-Pressure Detection Temp : 65° C 3. Release Temp : 50° C	1. Off on sensor failure 2. 50-100° C 3. 0-50° C
F12	EVA-out Temp. Display	Temp. Display	OFF on sensor failure
F13	Ice & Water Dispensing Method	B (Simultaneous)	A (Sequential)/B(Simultaneous)
F14	Cleaning Completion Count Check	W__ 3	Cleaning Completeion Count (3 Times)
F15	Auger Time Reset Count	1._2	1. : Reset Motor
	Cleaning Reset Count		2 : Reset Cleaning
F20	OFF Time	OFF	None
	On Time	OFF	None
F21	Overcooling Detection (Enable/Disable)	ON	ON/OFF
	Overcooling Detection Temp.	-20° C	-30-10° C
	Overcooling Release Temp.	0° C	0-10° C
	Rest Time (Idle Time)	60min	0-240min
F22	Stall Detection Start Temp.	-12° C	-30-10° C
	Temp. Sensing Cycle	30sec	1-60sec
	Differential Temp.	2° C	1-10° C
	Rest Time after Stall Detection	60min	5-60min
	Stall Detection Exclusion Time	600sec	60-900sec
F24	Stall Detection Current Setting	3.0A	0.1-9.9A

ERROR CODES

DISPLAY	ERROR TYPE	CAUSE	RESET	OPERATION
Er01	Ice Making Failure	If the EVA OUT temperature exceeds 0°C after 30 minutes from the start of ice making.	Reset by selecting <STOP> mode switch or by power reapplication. If it occurs fewer than 3 times, restart after 5 minutes.	All loads OFF. Operation stops.
Er03	Weak Ice-Making Performance	If the EVA OUT temperature exceeds -1°C after 10 minutes from the start of ice making.	Reset by selecting <STOP> mode switch or by power reapplication. If EVA OUT is below -1°C in the next ice-making cycle.	Continue Operation. Remove error code display and record only in the log.
Er06	EVA OUT Sensor Failure	If the EVA OUT sensor is OPEN or SHORT.	Automatically reset if the EVA OUT sensor is not OPEN or SHORT.	All loads OFF. Operation stops.
Er07	Condenser Sensor Failure	If the CONDENSER sensor is OPEN or SHORT.	Automatically reset if the CONDENSER sensor is not OPEN or SHORT.	All loads OFF. Operation stops.
Er13	High-Pressure Failure	When the high-pressure switch is detected (not detected during cleaning or full ice condition).	Automatically reset if the high-pressure switch is not detected. Reset by selecting <STOP> mode switch or by power reapplication.	All loads OFF. Operation stops.
Er14	High-Pressure Failure	If ER 13 recurs 3 times or more within 1 hour.	Reset by selecting <STOP> mode switch or by power reapplication.	All loads OFF. Operation stops.
Er15	Water Level Sensor Failure or Water Supply Failure	During water supply V/V ON, the high water level sensor is not detected for up to 2 minutes. If both high and low water level inputs are detected simultaneously.	Stop operation and automatically reset after 5 minutes (restart from initial ice-making cycle). Reset by selecting <STOP> mode switch or by power reapplication.	All loads OFF. Operation stops.
Er16	Drain Failure or Water Level Sensor Failure	During drain V/V ON, the low water level sensor is not detected for up to 1 minute.	Automatically reset after 5 minutes from stop (restart from initial ice-making cycle). Reset by selecting <STOP> mode switch or by power reapplication.	All loads OFF. Operation stops.
Er21	Subcooling Occurrence	If the temperature below the value set in [F.21-2] is detected for 5 seconds and idle operation occurs 3 consecutive times or more.	Reset by selecting <STOP> mode switch or by power reapplication.	All loads OFF. Operation stops.
Er22	Motor Lock Due To Subcooling	If the temperature drop is steeper than the value set in [F.22] for 3 consecutive times or more.	Reset by selecting <STOP> mode switch or by power reapplication.	All loads OFF. Operation stops.
Er25	Motor Lock Due to Subcooling	If the current motor current exceeds the value set in [F.24] and is maintained for 5 seconds.	Restart after a 60-minute idle period.	All loads OFF. Operation stops.

TROUBLESHOOTING INDEX

1. No Power, Panel not Lit.
2. Cold Water is not Cold
3. No or Low Flow of Water
4. Overfill of Cold Tank
5. Operation Sensors are Unresponsive
6. Filtration

1. No Power, Panel not Lit

Possible Reason	Solution
Power Cord Disconnected	Ensure the power cable is properly plugged into the wall power outlet.
Tripped GFCI	Reset GFCI outlet.
Blown Fuse	Check Fuse on the PCB.

2. Not Producing Ice

Possible Reason	Solution
Cold Thermistor Fault	Replace Cold Thermistor.
Compressor Failure	Check temperature of compressor and report your readings to technical support.
Auger Failure	Inspect Auger for obstruction, scale, power.

3. No or Low Flow of Water

Possible Reason	Solution
Source Water Turned Off	Make sure the source water feed is turned on.
Clogged Filter	Check flow individually from each filter to ensure flow. Replace any filter with reduced flow.
Solenoid Clog or Failure	Check dispense solenoids for proper function. May need to be disassembled to remove blockage, or replaced if failed.

4. Overfill of Reservoir

Possible Reason	Solution
Mechanical Float Failure	Check function of fill float in back of unit. When the float lifts, it should choke water flow to zero. If not, replace.

5. Operation Sensors are Unresponsive

Possible Reason	Solution
Power Failure	Check power at outlet, and check fuse on the back of unit.
Sensor Failure	Ensure sensor has not disconnected from PCB. Ensure front panel protective film has been removed from the unit. If sensor is still unresponsive, replace them.

6. Filtration

It is recommended using RO where possible and almost always if TDS from the tap is greater than 150 PPM. For an RO to work properly it is very important that the following variables are addressed and performed properly.


- Incoming Water Pressure: RO's require 60-70psi to work properly.
- Lower PSI will cause the reduction in TDS to suffer greatly, as well as the recovery rate.
 - 60psi results in (roughly) 7.3oz/min from 80GPD membrane.
 - 40psi results in (roughly) 2-3oz/min from 80GPD membrane.
 - 60psi results in (roughly) 98% reduction of TDS from the RO
 - 40psi results in (roughly) 80-85% reduction of TDS from the RO
 - Example:
 - 500 Tap TDS at 98% reduction = 10TDS product water
 - 500 Tap TDS at 85% reduction = 75TDS product water
 - 500 Tap TDS at 80% reduction = 100TDS product water
 - With the mineral add back filter a high concentration of calcium will negatively impact the amount of scale that will, as a result, negatively impact ice systems.
 - When using a bladder, this is much more susceptible to manifesting itself as a problem.
 - As the bladder pressure pushes back on the filter, lower pressure will reduce recovery even beyond the above stated levels and will be unable to properly fill the bladder.
 - This will also result in burning through pre filters as it will take much more water to make little product water.
 - Signs of this issue in gravity fed tanks will be manifested mostly through form of taste complaints, in this system it will manifest itself as running out of water prematurely.

Solutions for Low Water Pressure:

- Add a Booster Pump
- Use Carbon Filtration (be sure to remove the mineral add back filter)

Bladder Tanks:

- It is important that the right size bladder tank be used in conjunction with sufficient flow.
- It is ALSO important that the bladder tank be set to the correct pressure.

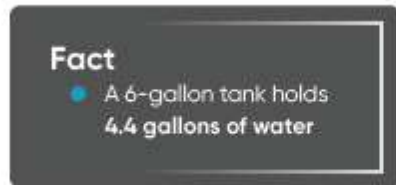

- Increasing air pressure will reduce the water capacity while also increasing water pressure
- Decreasing air pressure will increase the water capacity while also decreasing water pressure
- With no air the water tank will be full, but there will be no pressure to release water



Bladder Tank Water Pressure Changes

Bladder tanks have fluctuating water pressure as they empty. This may impact the flow rate going to the system as the tank is depleted.

- The amount of bladder tanks, filter banks feeding the bladder, pressure, and if a booster pump are needed must all be considered for install requirements. No two accounts are the same and usage will greatly impact the decision. If you have a large bladder tank installed and you have reports of no water, please revert to the above section on how to check to see if water flow is an issue.
- For large usage account with larger bladders, it may be necessary to have additional filter banks to improve the recovery time.
 - Please note that when doing this a booster pump may become necessary even if there a tap pressure of 60psi.
 - Failure to take this into consideration may cause the bladder to ineffectively fill due to pressure drop with multiple units in line which mainly manifests itself as the larger bladder tanks get closer to filling
 - This will also result in burning through pre filters and using a lot of water that will ultimately be just sent down the drain

Please see below for recommended air pressure that should be in the bladder depending on size of the bladder.

Size	Part Number	Size	Recommended Air Pressure
4 Gallon	EQGENE-0004	11" (Diam.) x 14" (Height)	6-7 psi
14 Gallon	EQGENE-0014	15" (Diam.) x 23" (Height)	6-7 psi
20 Gallon	EQGENE-0020	16" (Diam.) x 29" (Height)	7-10 psi
32 Gallon	EQGENE-0032	21" (Diam.) x 28" (Height)	7-10 psi
44 Gallon	EQGENE-0044	21" (Diam.) x 37" (Height)	10-15 psi
85 Gallon	EQGENE-0085	26" (Diam.) x 45" (Height)	10-15 psi
120 Gallons	EQGENE-0120	26" (Diam.) x 60" (Height)	10-15 psi